


Core Creek Custom Woodwork

Wood Molding Profiles

Add beauty & value to any new or remodeled home with
CUSTOM MOLDING for...

- Room Trim
- Cabinetry
- Fireplace Mantles
- Reproduction Antiques
- Antique Repair
- Home-Office Furniture
- Musical Instruments
- Furniture
- Sculpture & Artwork
- Boats
- Flooring
- Historic Home Restoration
- And Much More!

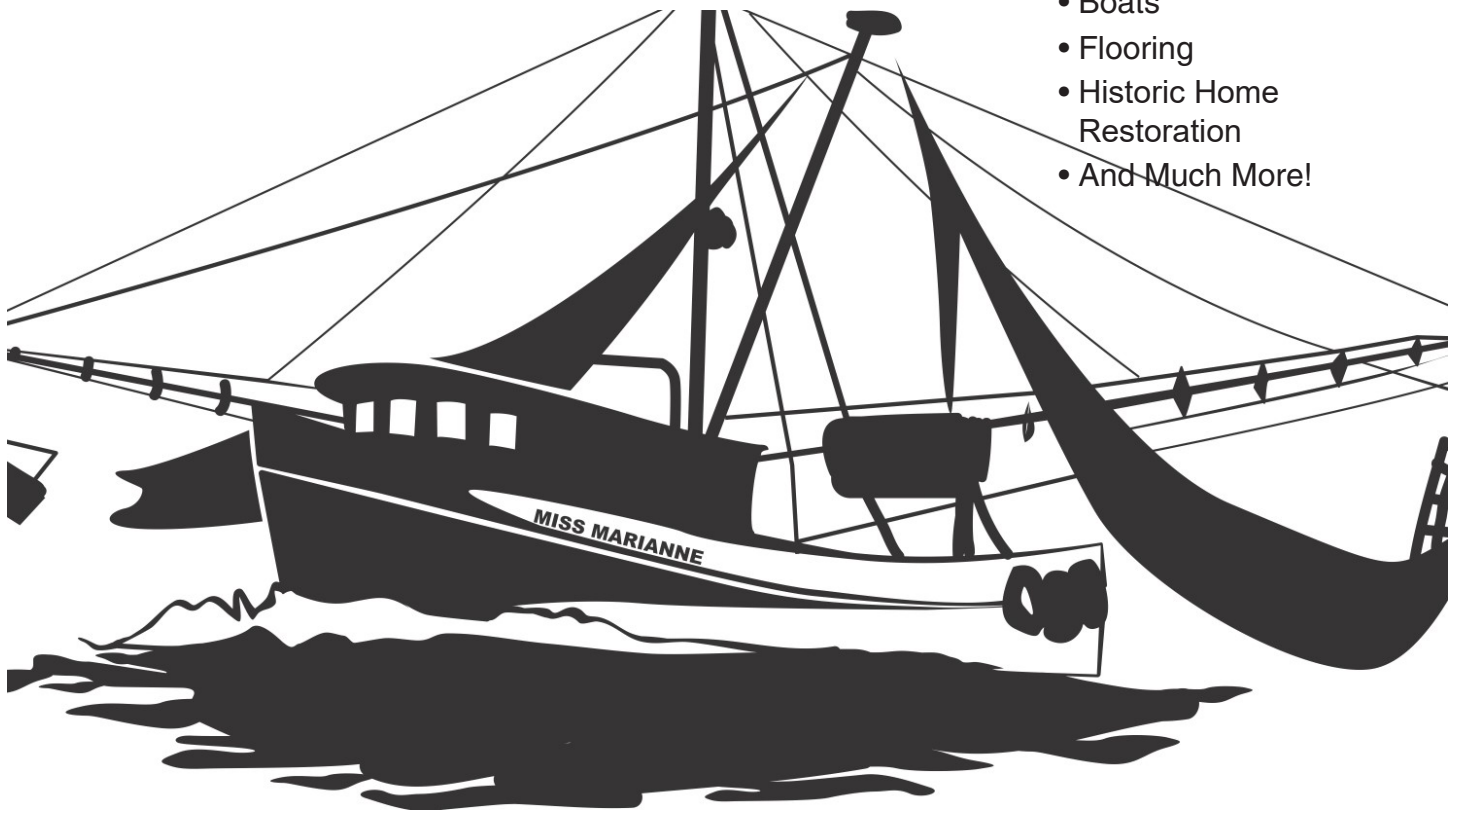

Core Creek Custom Woodwork

252-648-1677

wittemitt@gmail.com•




A Homeowner's and Building Contractor's guide to molding patterns

TABLE OF CONTENTS

Pattern	Page No.
Astragal Patterns	14
Bar Rail Patterns.....	66
Base Molding Patterns	47-49
Base Shoe Patterns	13
Batten Molding Patterns	16
Bed Molding Patterns	9
Brick Molding Patterns	54
Bullnose Patterns	53
Casing Patterns	20- 44
Chair Rail Patterns	19
Colonial Casing Patterns	45-46
Cove Molding Patterns	10-11
Craft Knife Series Patterns	70
Crown Molding Patterns	5-8
Hand Rail Patterns	17
Log Cabin Siding Patterns.....	60-63
Panel Strips / Mullion Casing Patterns	52
Picture Molding Patterns.....	18
Plantation Louvers Patterns	67
Plinth Molding Patterns.....	55
Quarter Round Patterns	12
Shingle / Panel Molding Patterns	15
Stop Molding Patterns	50 - 51
Tongue and Groove Knife Patterns	64 - 65
Transition Molding Patterns	68
Wood Plank Paneling Patterns	56 - 59

CONGRATULATIONS on CHOOSING CUSTOM WOOD MOLDING

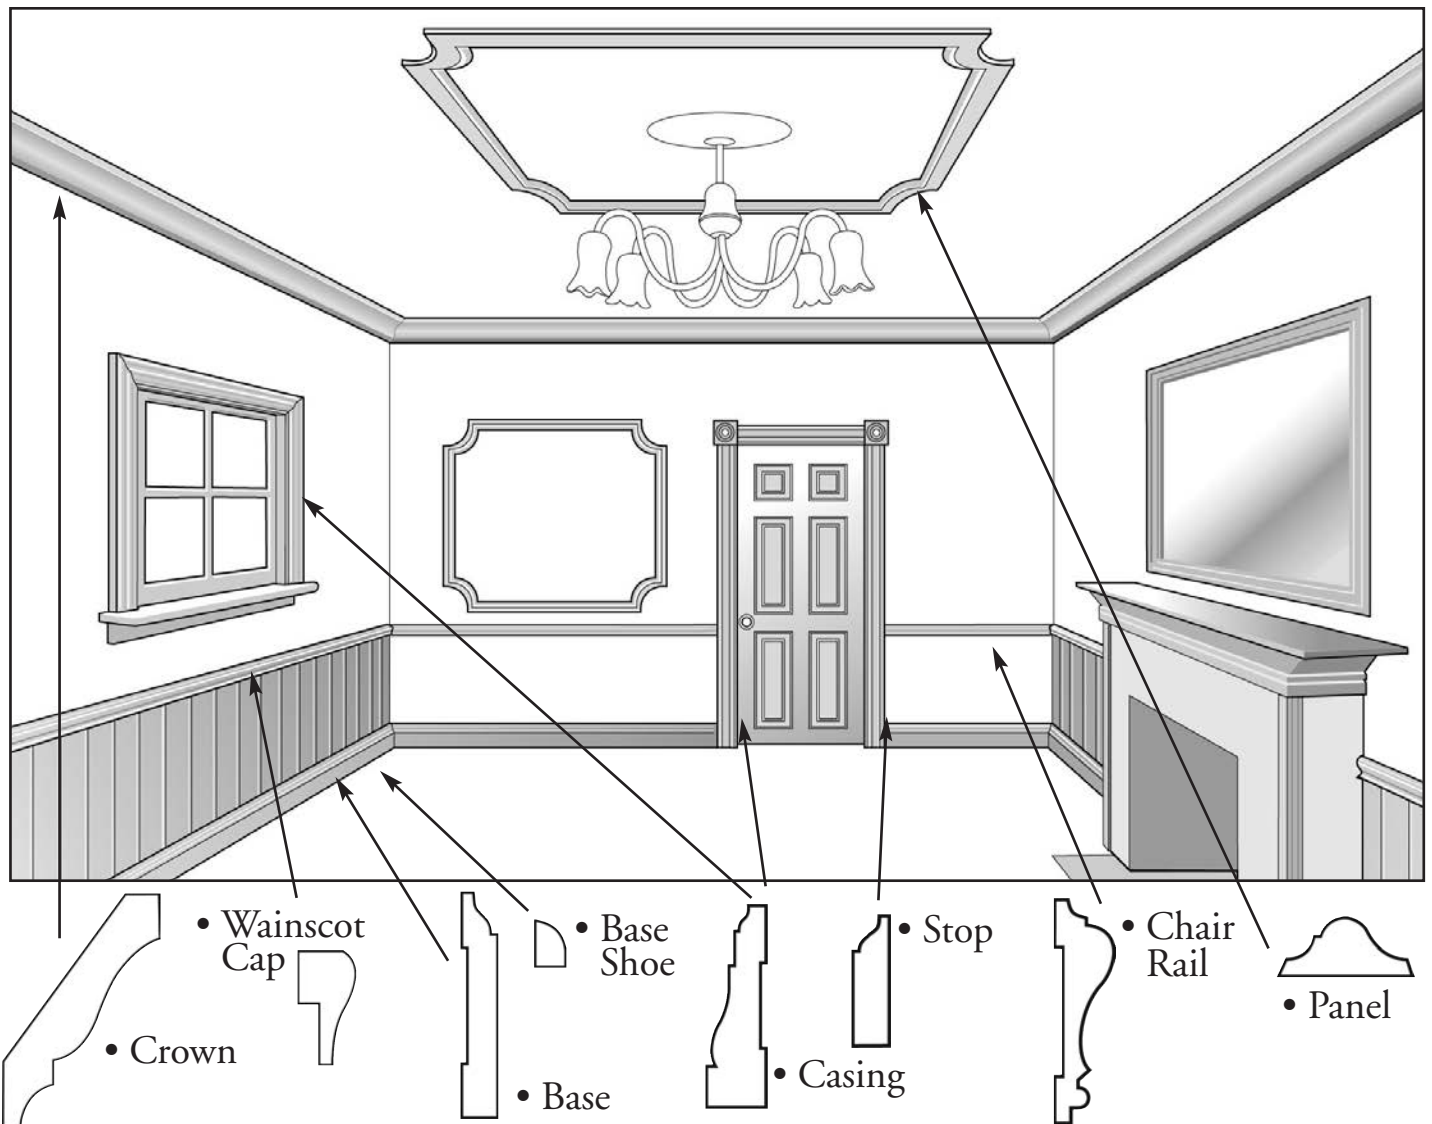

Adding WOOD MOLDING to a room is like putting a frame around a picture: the perfect finishing touch that enhances both beauty and value.

Core Creek Custom Woodwork can make any of the more than 400 molding patterns shown in this book as well as CUSTOM molding patterns, too. We also do custom width flooring as well.

How to use this Sample Book

- Wood molding can be used in many ways to beautify a room. The illustration above shows just some of them.
- Refer to the illustration to find the KIND of molding you seek. (Examples: Crown Molding, or Chair Rail, etc.)
- Browse this book to find additional kinds of molding not shown in the above illustration. (Examples: Quarter Round Molding, Hand Rails, etc.)
- Then go to the section of this Sample Book devoted to that kind of molding and browse through the various PROFILES within that kind of molding.
- All profiles shown in this Sample Book are FULL SIZE in FULL PERSPECTIVE so you can see exactly what they'll look like installed in your home.



Custom Cabinets, Furniture, and Millwork

252-648-1677

How do we price our millwork service?

Calendar Year 2023

Our service provides a custom product that typically cannot be found in local hardware stores. Most big-box home supply stores have a selection of common trim patterns that are cut into either wood or medium density fiber board, then pre-primed for installation, final caulking, and painting. Our service is here to cut a variety of patterns from specific wood species that will be naturally finished to show wood grain and color. However, we can cut the same patterns using pine/spruce and even PVC so they can be painted.

Wood species we work with include: red oak, poplar, clear southern pine, soft and hard maple, cherry, walnut


and a variety of imported woods such as African sapele, teak, mahogany, and others.

Core Creek Custom Woodwork prices this service by the lineal foot and molding/flooring width, plus a setup fee, molding knife charge, and the wholesale cost of material. Customers do have the option to supply their own material. Material should be kiln dried, surfaced on two sides and straightened on a rip saw (S3S). We can surface and straighten rough lumber for an extra per lineal foot charge that will be determined at the time of material delivery. Excessively bowed, twisted, and otherwise warped wood cannot be worked efficiently. We can do large quantity pricing, but our pricing is consistent up to 2000 LF--that is the life of a cutter before it needs sharpening and/or replacement. Very hard wood can shorten cutter life significantly. Please keep in mind that a few 10ft sticks of molding may not be cost effective for your project. If you need small quantities we will try to direct you to a retail supplier. Or, we may have leftover pieces from a previous run.


Setup Fee:	\$250.00
Cutter Cost:	\$150-500.00
Lineal Foot Charge(1.75 to 3" widths)	\$1.90
Lineal Foot Charge(>3 to 6" widths)	\$2.50
Plus Material (Acquisition fee, \$55)	

CROWN - Core Creek Molding Pattern


WM4037
(3/4" x 4-1/2")

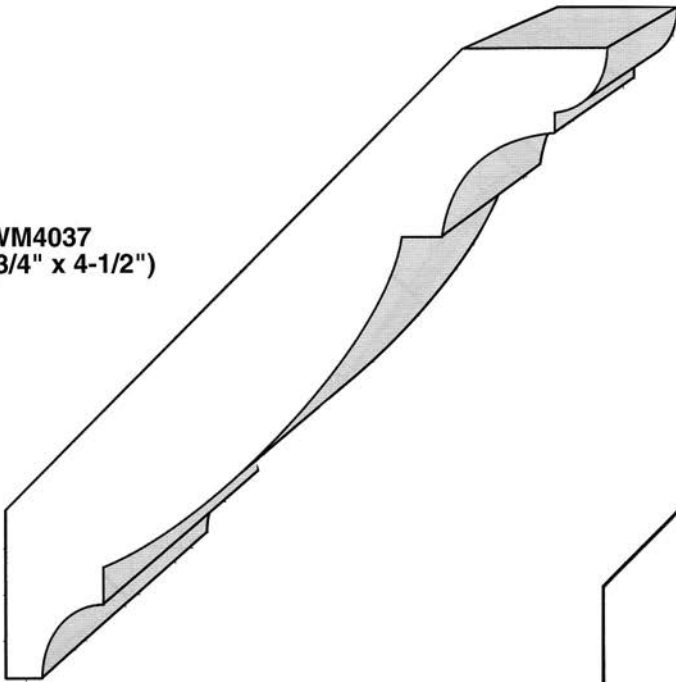


WM4038
(3/4" x 4")

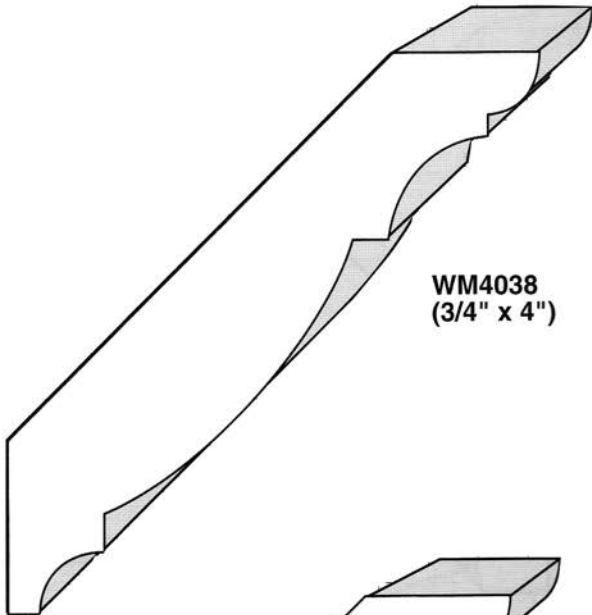


WM4039
(3/4" x 3-1/2")

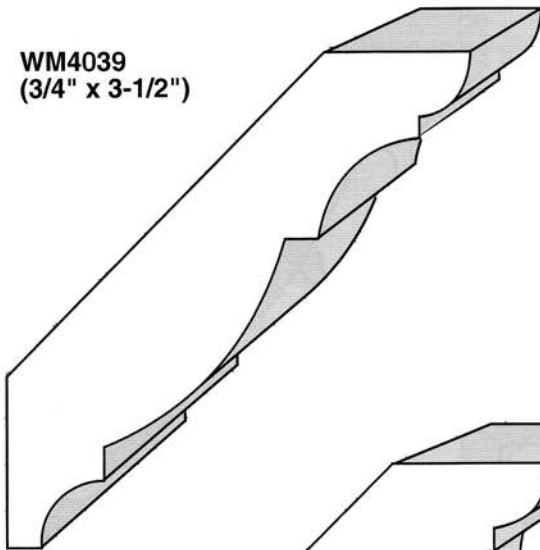

WM4040
(3/4" x 3")

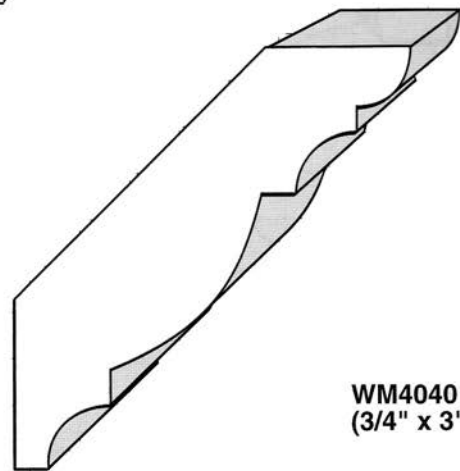


WM4041
(3/4" x 2-1/2")

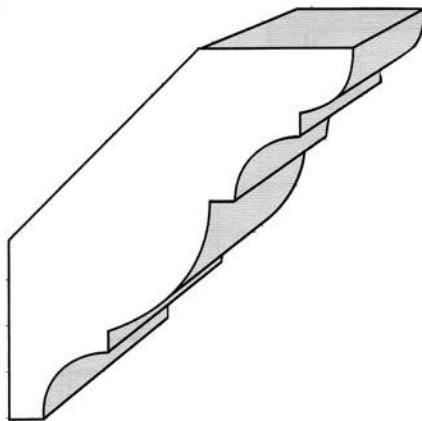


Core Creek Molding patterns - **CROWN**


WM4042
(3/4" x 5")

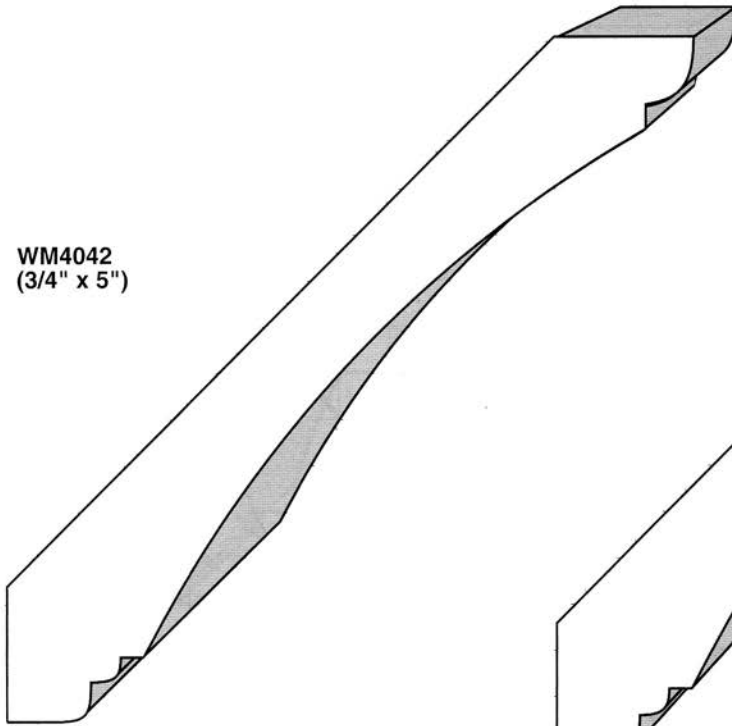


WM4043
(3/4" x 4-1/2")

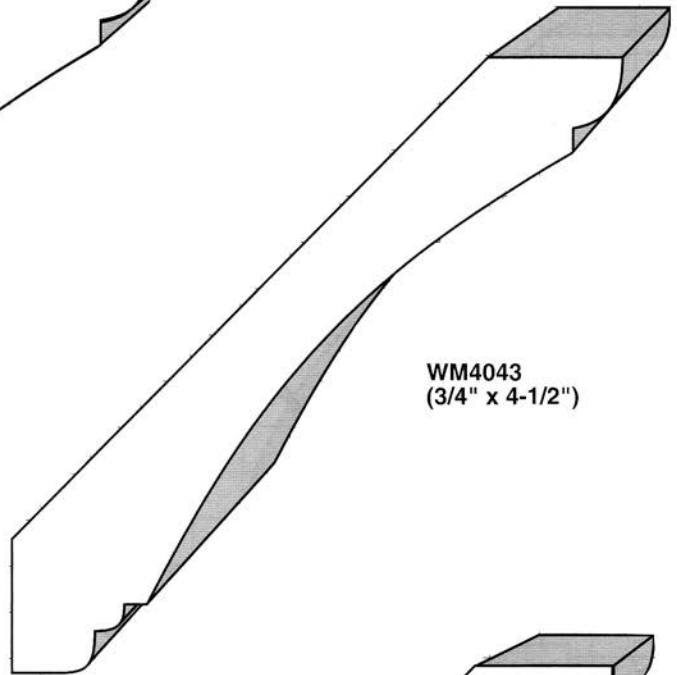


WM4044
(3/4" x 4")

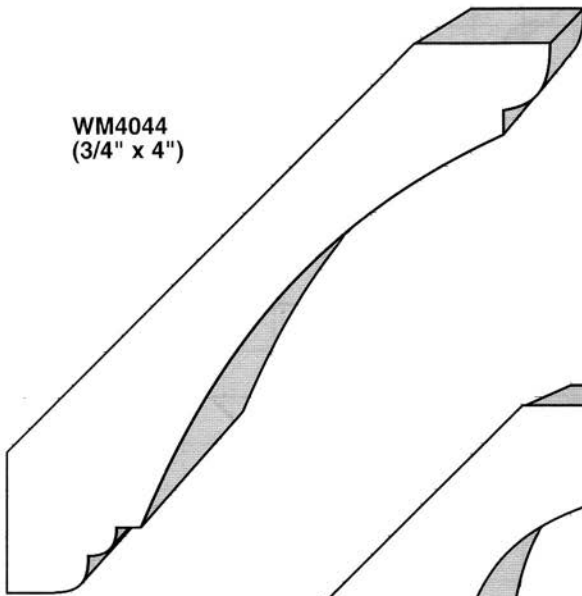


WM4045
(3/4" x 3-1/2")

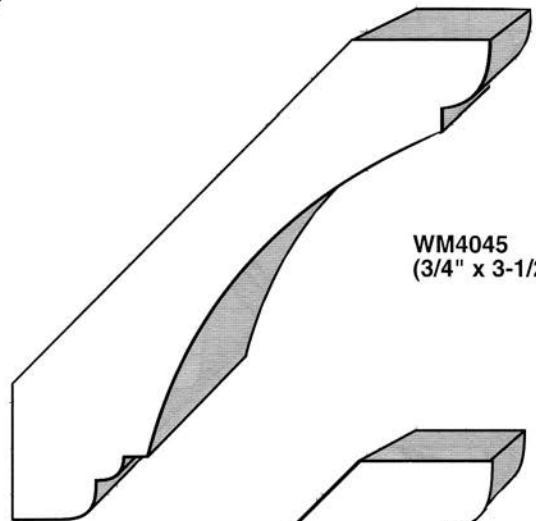

WM4047
(3/4" x 2-1/2")

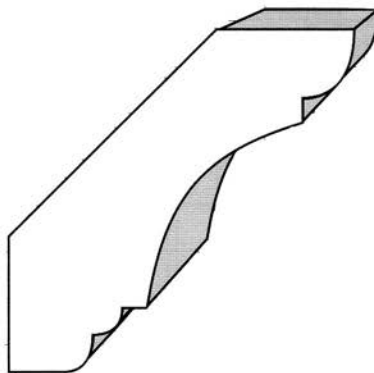


WM4046
(3/4" x 3")

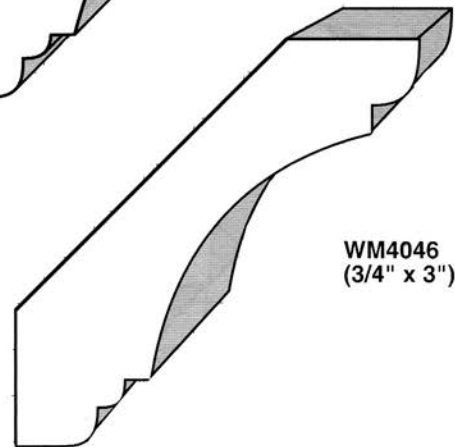


CROWN - Core Creek Molding Patterns


WM4048
(3/4" x 5")

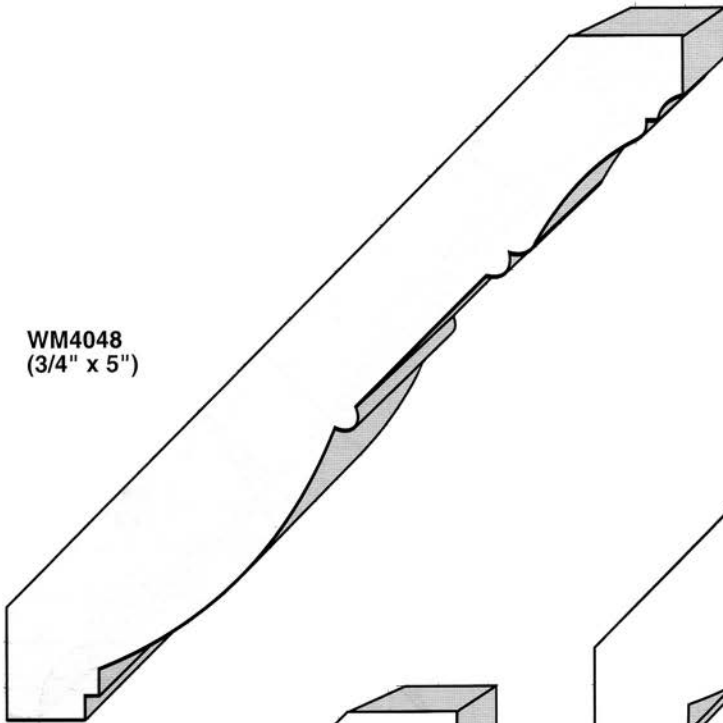


WM4049
(3/4" x 4-1/2")

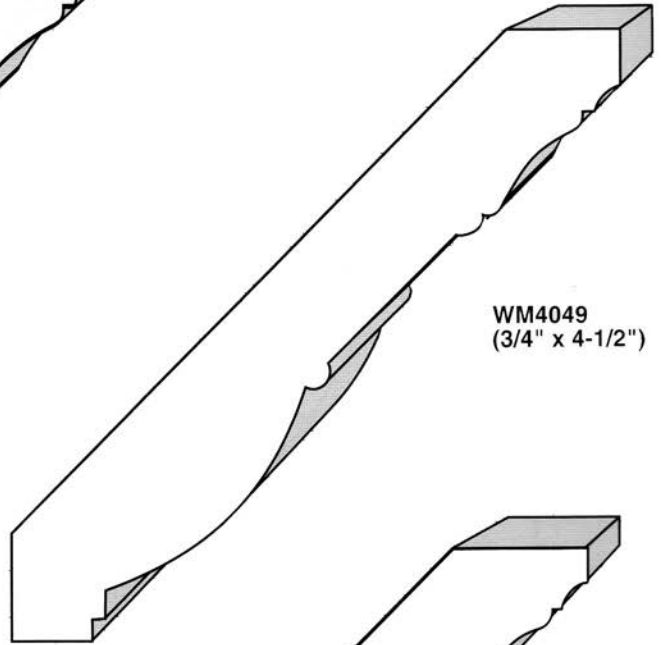


WM4050
(3/4" x 4")

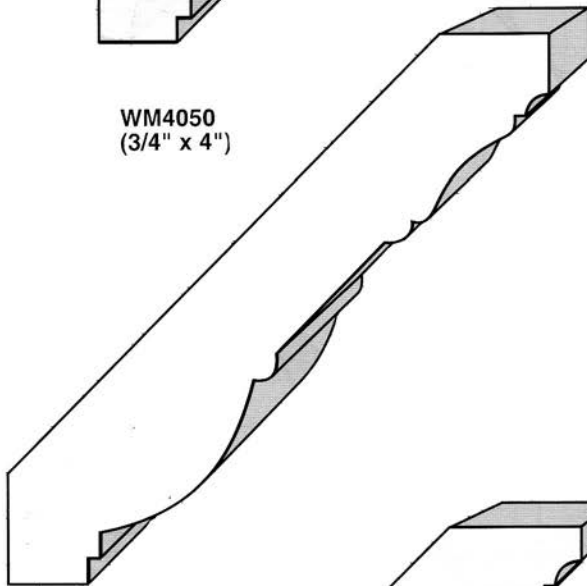


WM4051
(3/4" x 3-1/2")

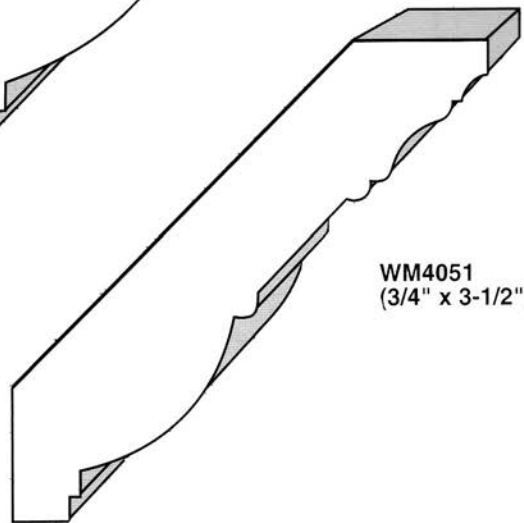

WM4052
(3/4" x 3")

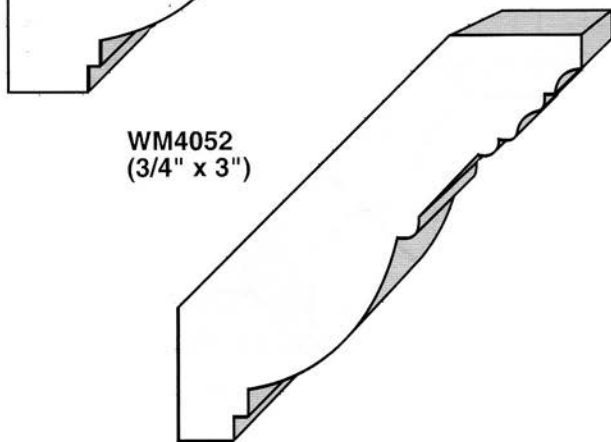


WM4053
(3/4" x 2-1/2")

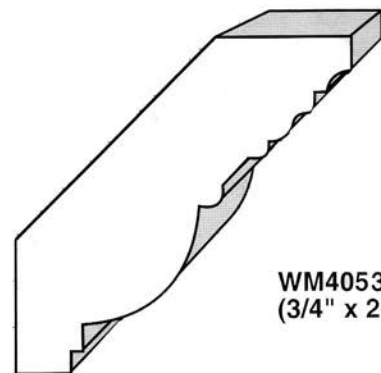


Core Creek Molding Patterns - **CROWN**


WM4054
(3/4" x 5")

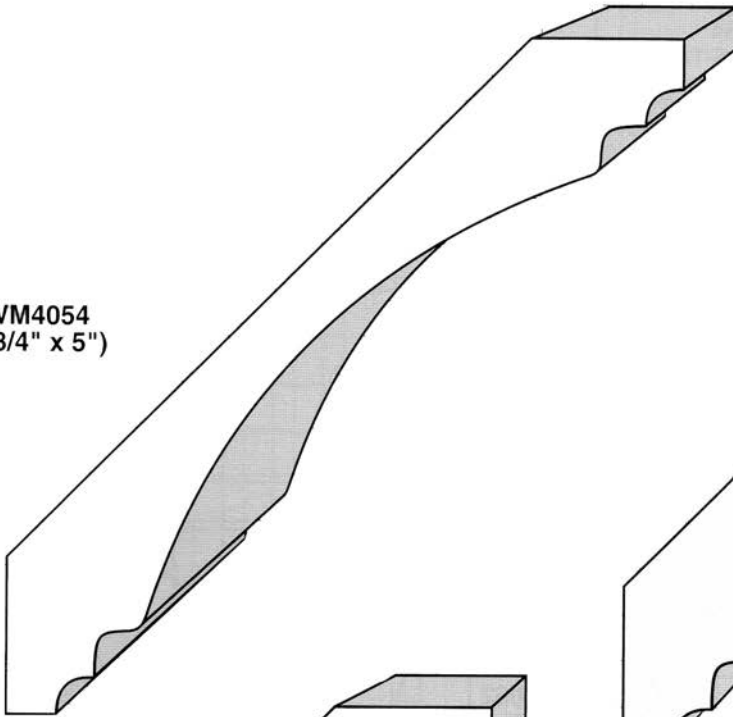


WM4055
(3/4" x 4-1/2")

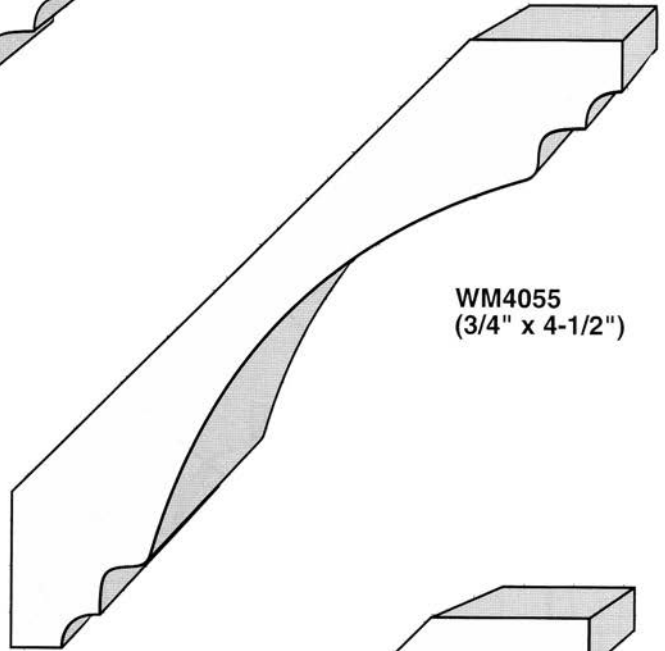


WM4056
(3/4" x 4")

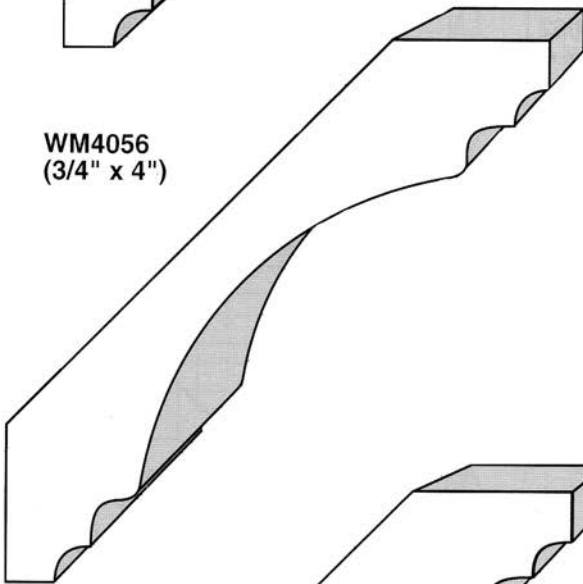


WM4057
(3/4" x 3-1/2")

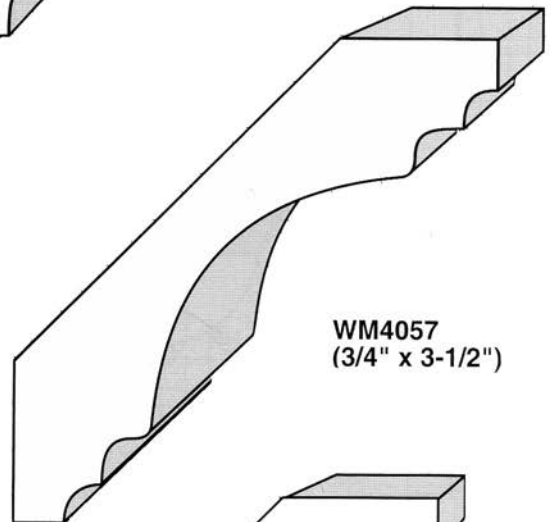


WM4058
(3/4" x 3")

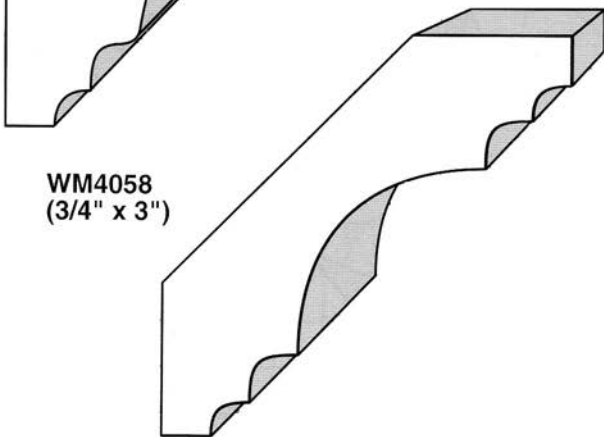

WM4059
(3/4" x 2-1/2")





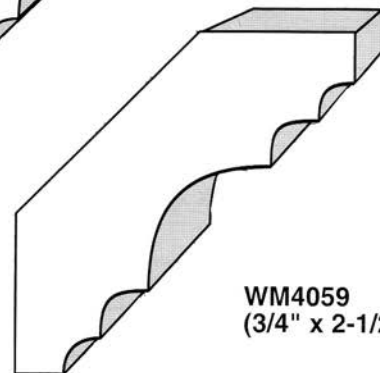


CROWN - Core Creek Molding Patterns

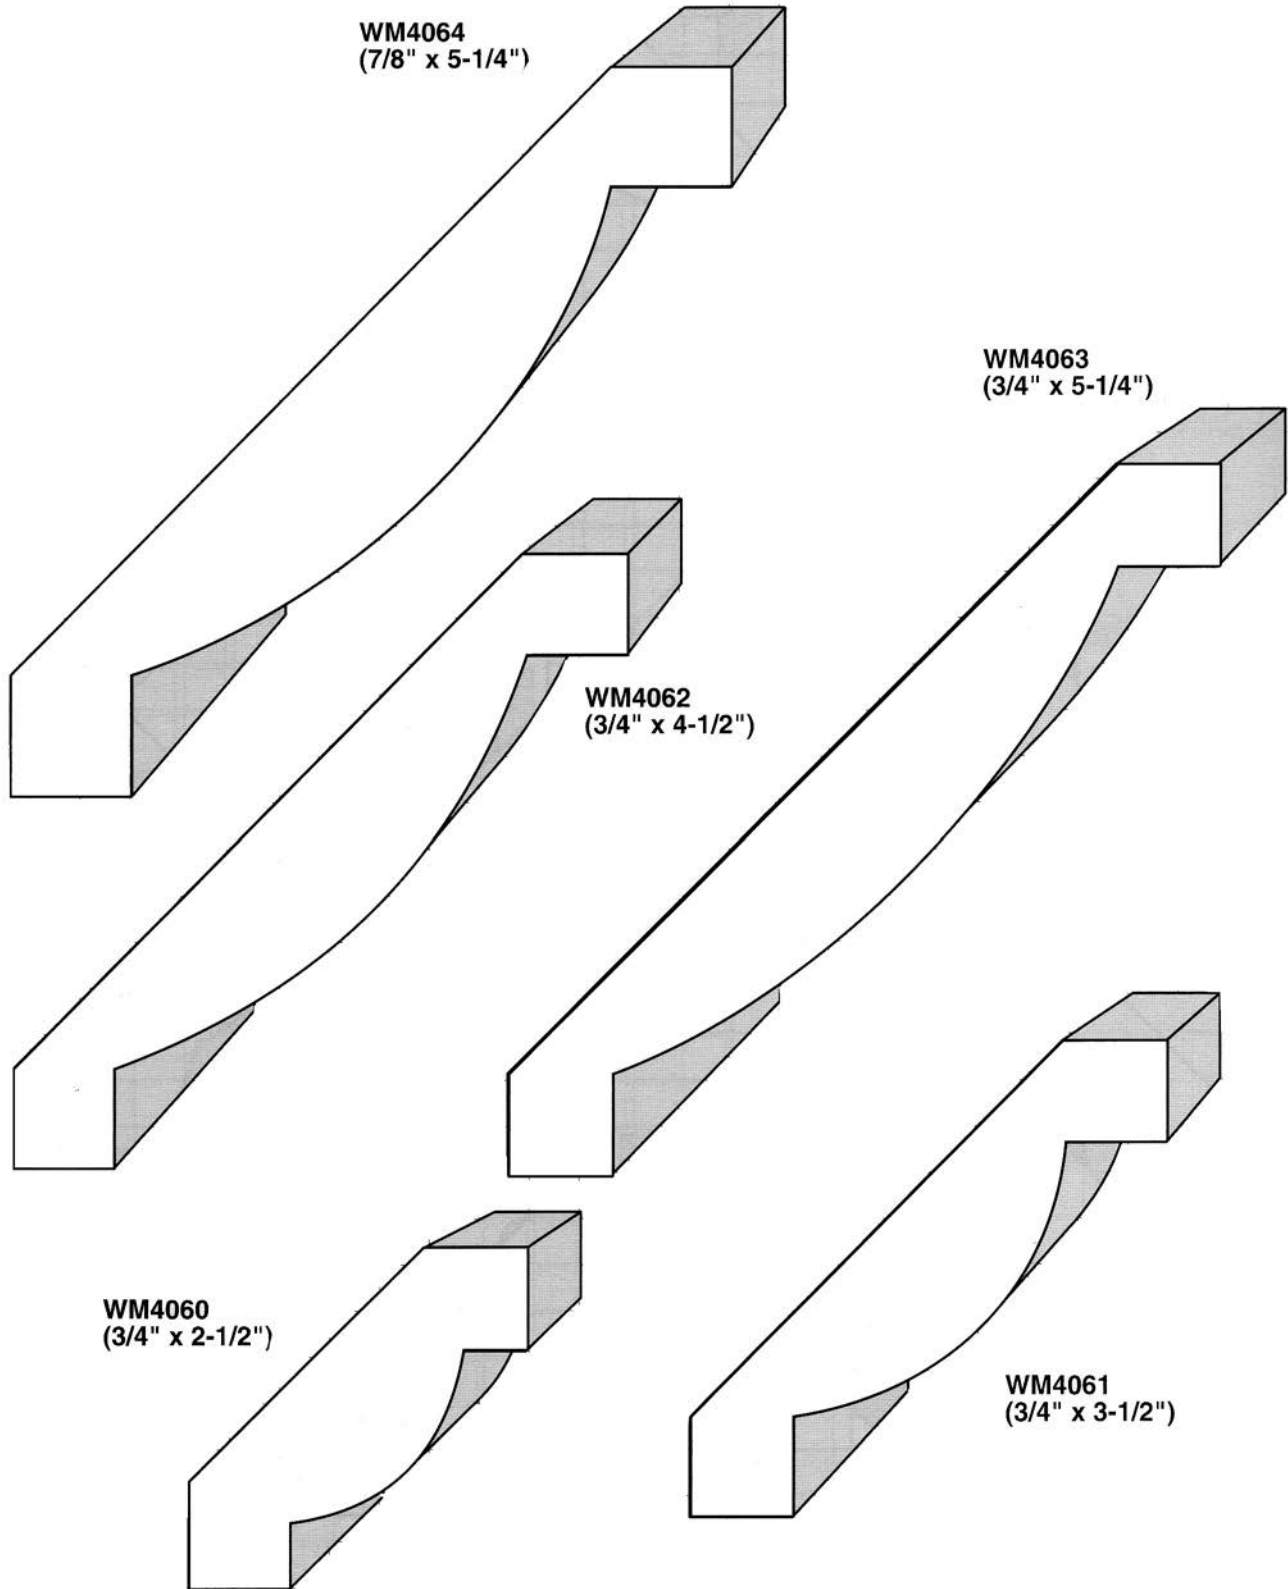


Core Creek Molding Patterns - **BED MOLDING**

Bed Molding is commonly used like crown molding, where walls meet ceiling. It is smaller in dimension, however, making it well suited for adding a finishing touch to a smaller or simpler room.

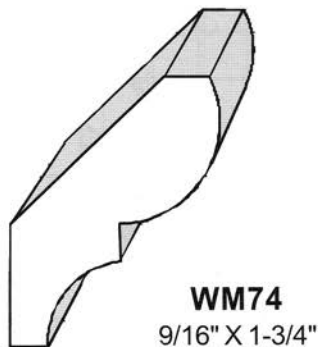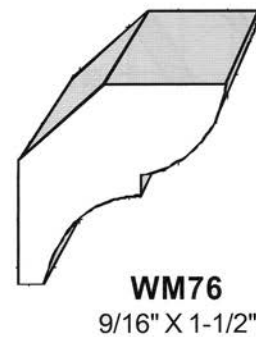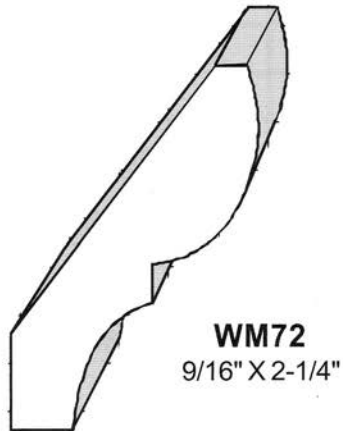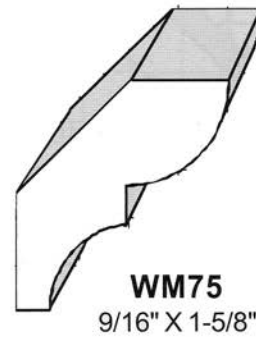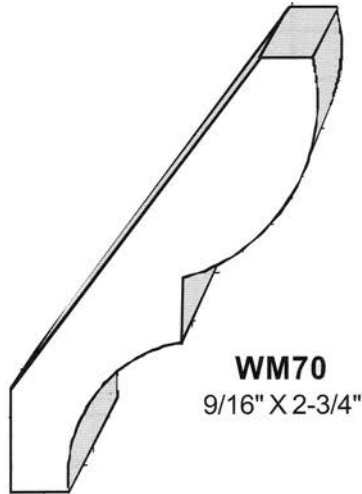


COVE - Core Creek Molding Patterns


Cove Molding has a distinctive concave profile. It is most often used at corners, to finishing edging materials, and as a ceiling cornice. Small dimension cove may be used as an inside corner guard.

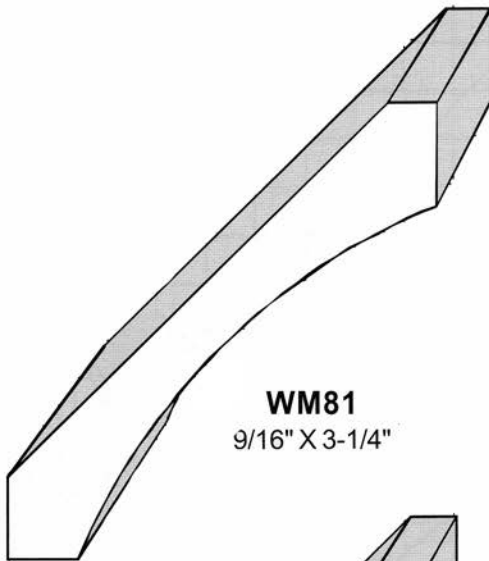


WM81
9/16" X 3-1/4"

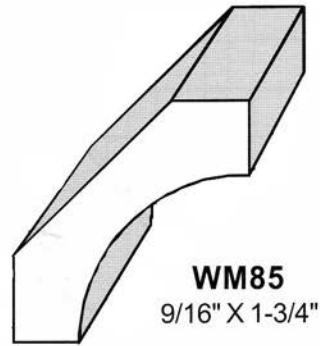


WM85
9/16" X 1-3/4"

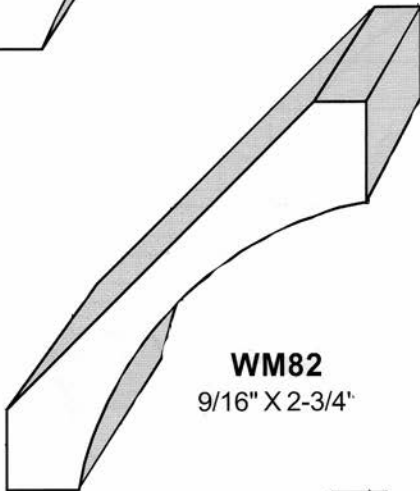


WM82
9/16" X 2-3/4"

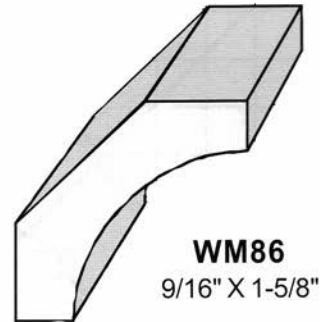

WM86
9/16" X 1-5/8"

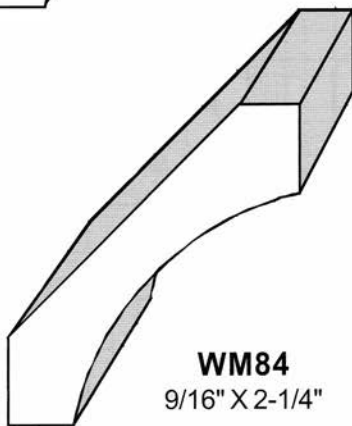


WM84
9/16" X 2-1/4"

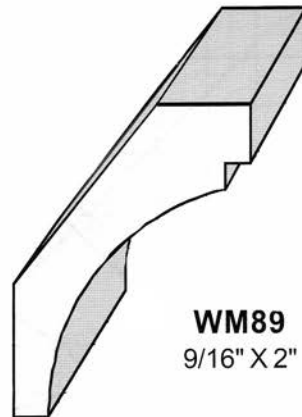


WM89
9/16" X 2"


Core Creek Molding Patterns - COVE

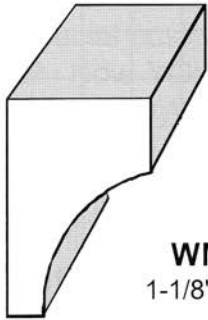


WM90
1-1/8" X 3/4"

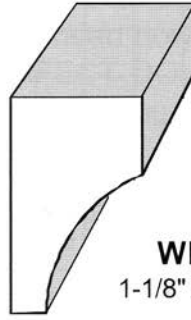


WM94
1-1/8" X 11/16"

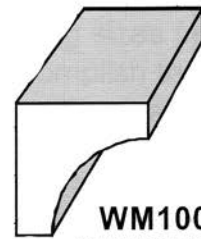


WM100
11/16" X 11/16"

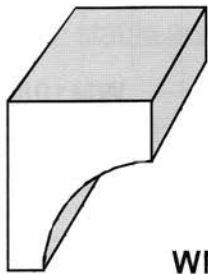


WM92
7/8" X 3/4"

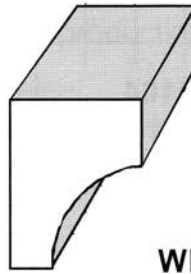


WM95
7/8" X 11/16"

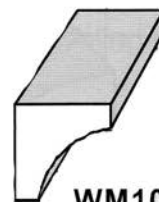

WM101
1/2" X 1/2"

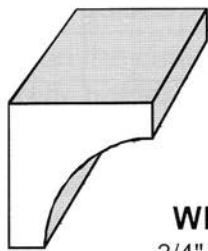


WM93
3/4" X 3/4"

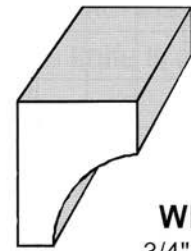


WM96
3/4" X 5/8"

QUARTER ROUND - Core Creek Molding Patterns


Quarter Round is extremely versatile. It can be used as a base shoe, as an inside corner molding, or to cover any recessed, 90-degree juncture. It's frequently used to cover the line where soffit and siding meet on home exteriors.

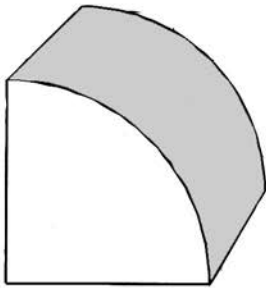


WM103
1-1/16" X 1-1/16"

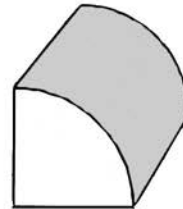


WM107
5/8" X 5/8"

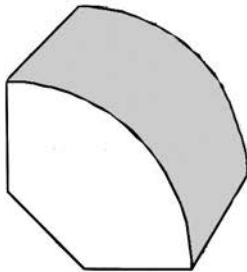

WM104
1 1/16" X 1-3/8"

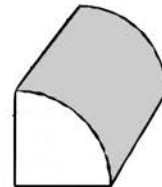


WM108
1/2" X 1/2"

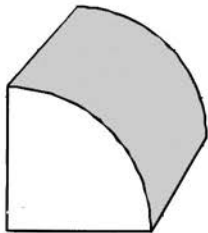


WM105
3/4" X 3/4"



WM109
3/8" X 3/8"

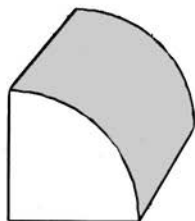

WM106
1 1/16" X 1 1/16"




WM110
1/4" X 1/4"

BASE SHOE - Core Creek Molding Patterns


Base Shoe is attached where the base molding meets the floor. This provides both molding and wall with extra protection against scuffs and damage from cleaning tools, and hides floor unevenness.



WM126
3/4" X 1/2"

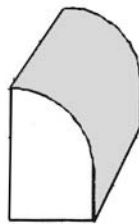

WM129
11/16" X 7/16"

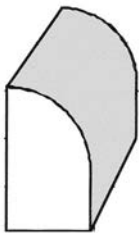


WM127
3/4" X 7/16"




WM131
3/4" X 1/2"

Core Creek Molding Patterns - **ASTRAGAL**


Astragal molding has a mirror-image profile. T-Astragal is attached to one of a set of doors to keep the doors from swinging through the opening. Flat Astragal is a decorative bead descended from classic Greek architectural design; a bead on a column just below its cap.

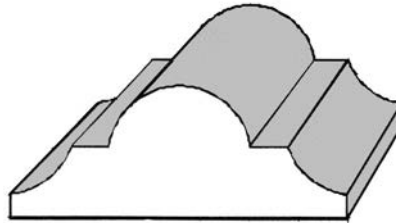

WM133
11/16" X 1-3/4"

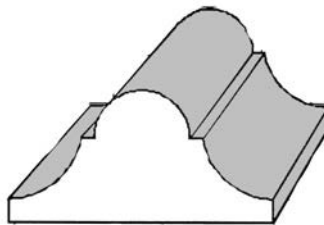


WM134
11/16" X 1-3/8"

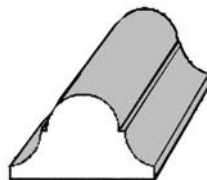


WM135
7/16" X 3/4"

SHINGLE AND PANEL - Core Creek Molding Patterns


These patterns can be used to create panel molding (see "panel molding knives") or as shingle molding applied to a building's rake and around exterior window frames.

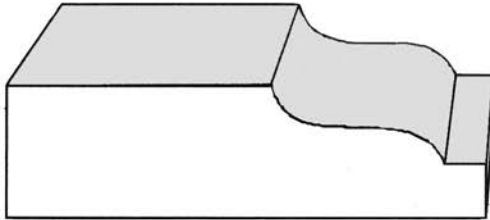


WM207
11/16" X 2-1/2"

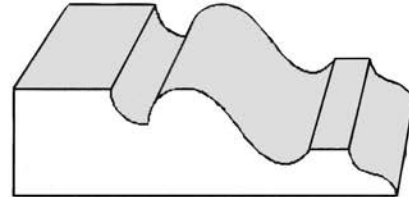


WM213
9/16" X 2"

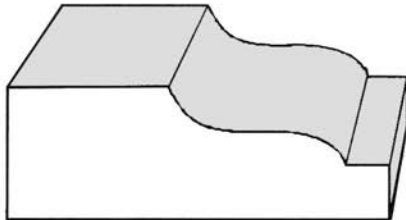


WM209
11/16" X 2"

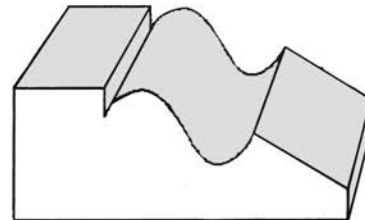


WM217
11/16" X 1-3/4"

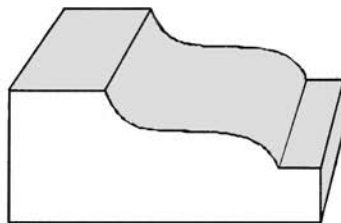

WM210
11/16" X 1-5/8"

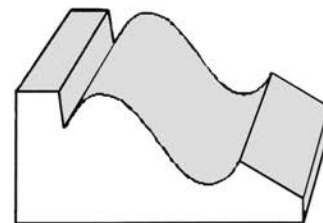


WM218
11/16" X 1-1/2"

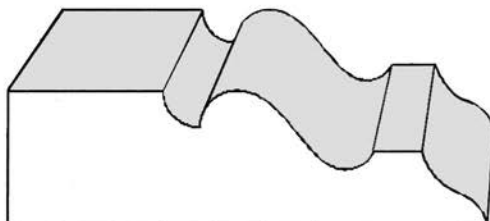


WM212
11/16" X 2-1/2"

Core Creek Molding Patterns - **BATTEN**

Batten trim is a thin strip, used to cover seams between panels of interior paneling or exterior siding.

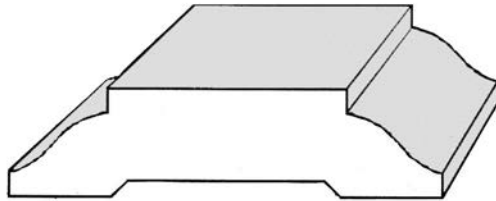


WM224
9/16" X 2-1/4"

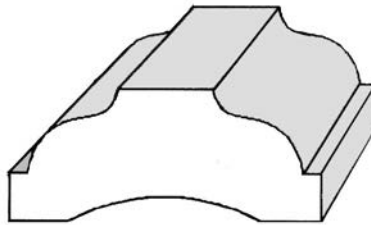


WM229
11/16" X 1-5/8"

HAND RAIL - Core Creek Molding Patterns


Core Creek Custom Woodworks can make deep-pattern hand rails. These patterns are in high demand for custom homes, especially in species such as walnut, cherry, and imported species

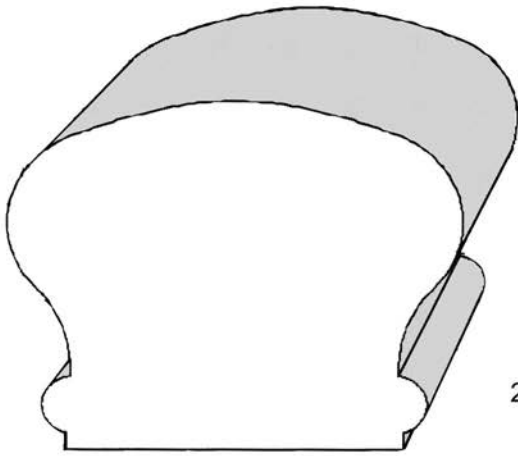


WM1000
2-3/8" X 1-13/16"

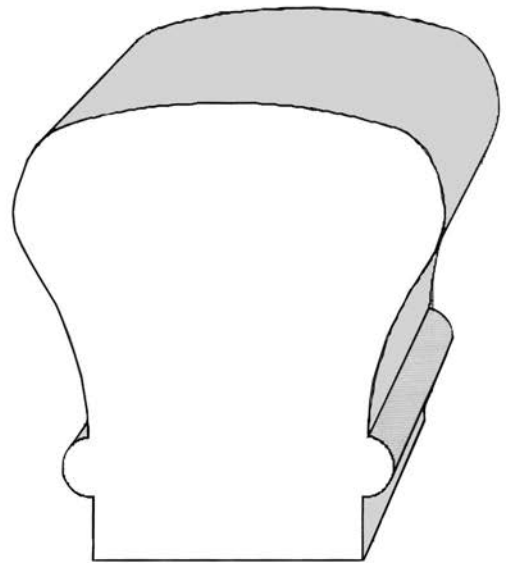


WM1003
2-1/4" X 2-3/8"

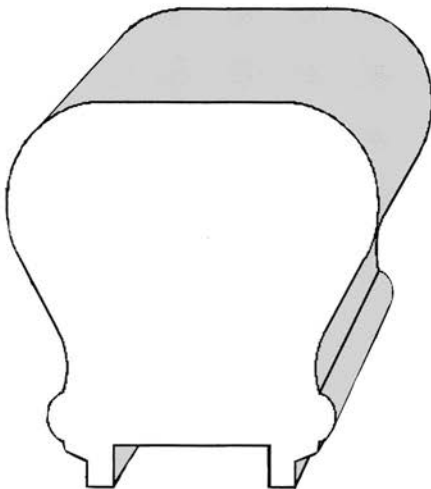

WM1001
1-15/16" X 2"

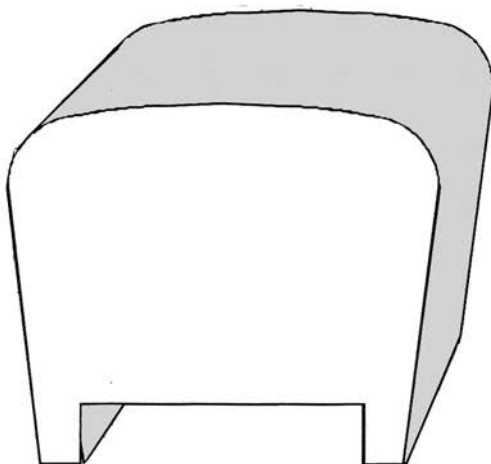


WM1002
2-1/4" X 1-7/8"

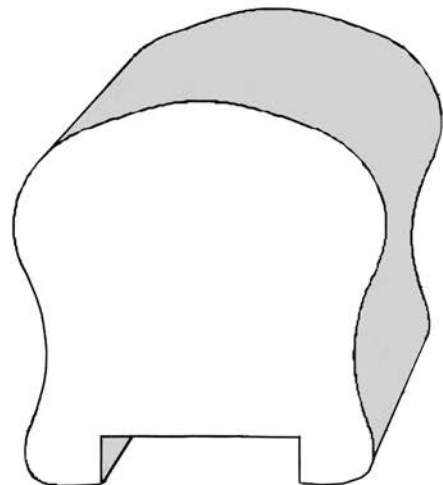


WM1004
1-15/16" X 2"

Core Creek Molding Patterns - **PICTURE**

Picture mold is a type of crown molding. It mounts high on the wall and lets you hang pictures or mirrors anywhere you like without putting hooks in your walls. Place hooks over the top of the molding, then hang the picture from wires.

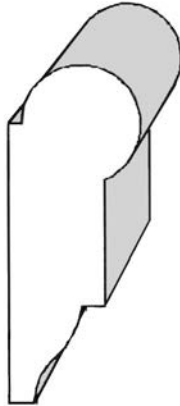


WM273
11/16" X 1-3/4"

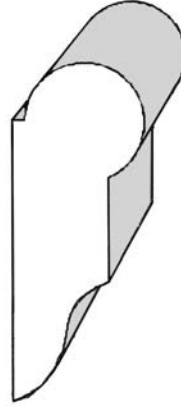


WM276
11/16" X 1-3/4"

Core Creek Molding Patterns - CHAIR RAIL

Chair rail is an interior molding intended to keep chairs from backing into and damaging the walls. It's applied parallel to base molding all around the room's perimeter.

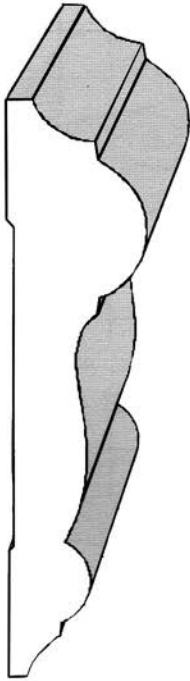


WM297
11/16" X 3"

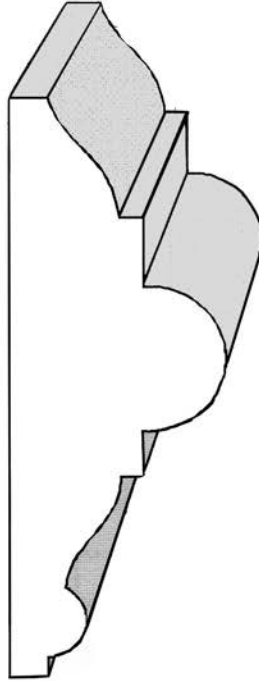

WM300
1-1/16" X 3"




WM304
1/2" X 2-1/4"

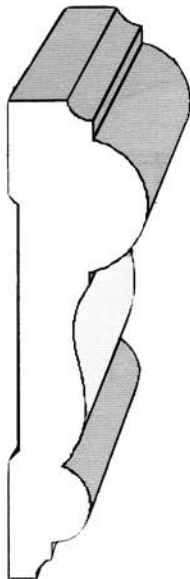

WM298
11/16" X 2-1/2"




WM303
9/16" X 2-1/2"

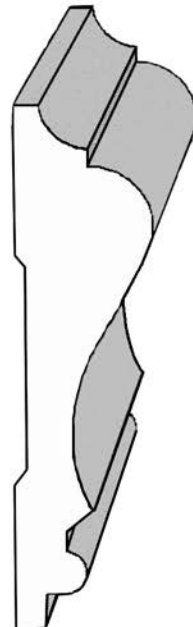


WM390
11/16" X 2-5/8"

CASING - Core Creek Molding Patterns


Casing patterns are used to trim the inside and outside of door and window openings and may be as simple or elaborate as you like. Casing styles include Colonial, Victorian, Georgian, fluted, reeded, and ranch.

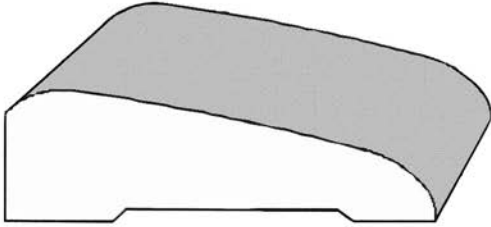


WM306
11/16" X 2-1/4"

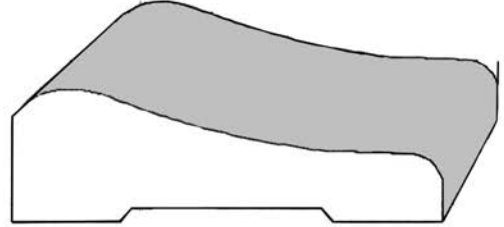


WM321
11/16" X 2-1/4"

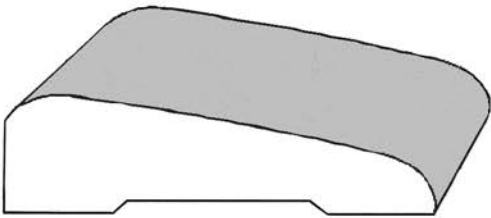


WM307
5/8" X 2-1/4"

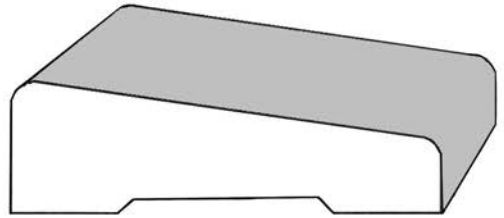


WM324
11/16" X 2-1/4"

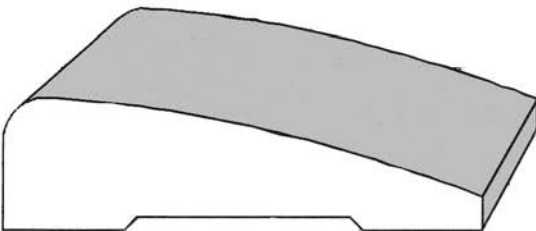


WM315
11/16" X 2-1/2"

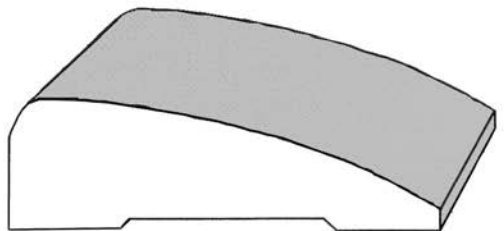

WM327
11/16" X 2-1/4"

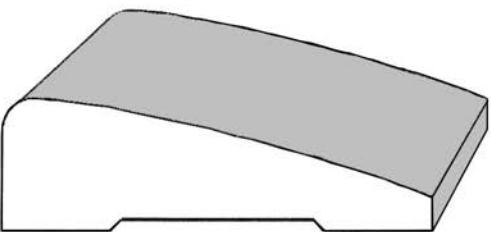


WM316
11/16" X 2-1/4"

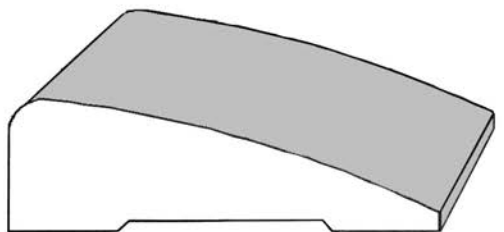


WM328
11/16" X 2-1/4"


Core Creek Molding Patterns - **CASING**

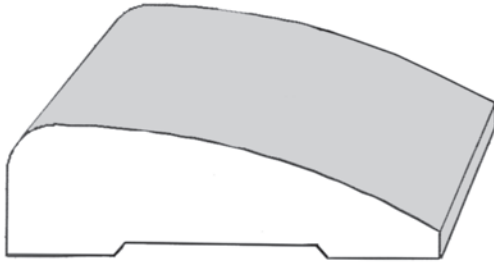


WM329
11/16" X 2-1/4"

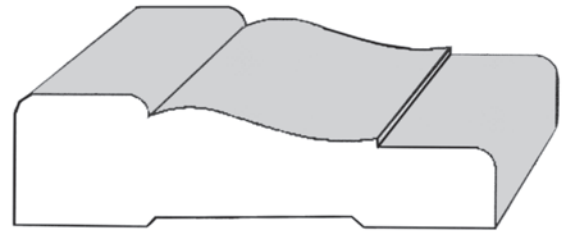


WM351
11/16" X 2-1/2"

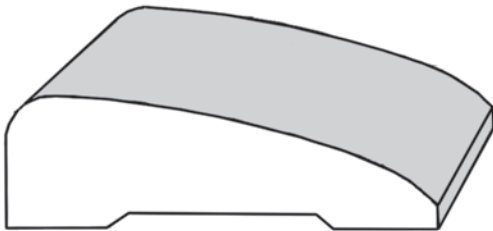


WM330
11/16" X 2-1/4"

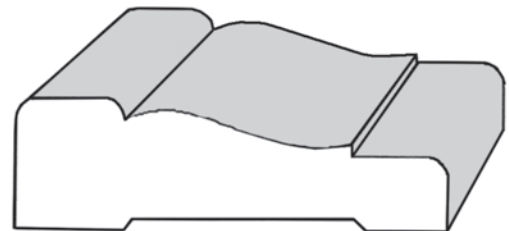


WM356
11/16" X 2-1/4"

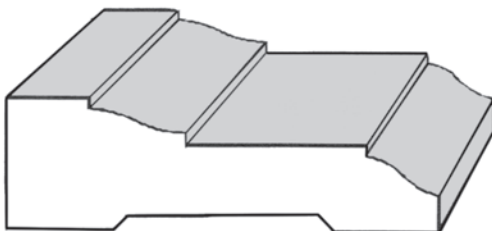


WM332
11/16" X 2-1/4"

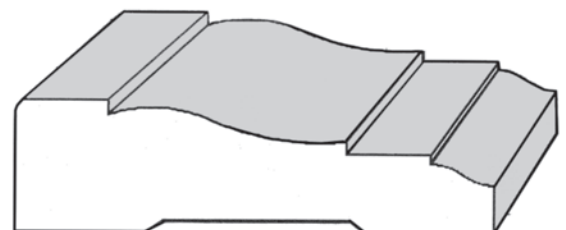

WM361
11/16" X 2-1/2"

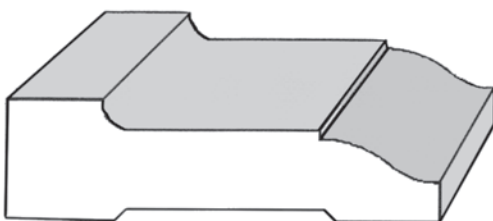


WM346
5/8" X 2-1/4"

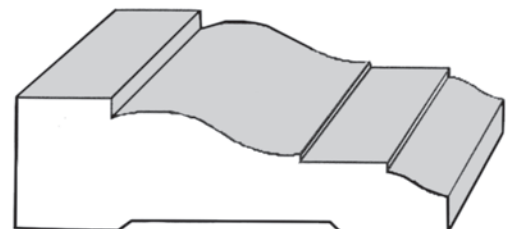


WM366
11/16" X 2-1/4"


CASING - Core Creek Molding Patterns

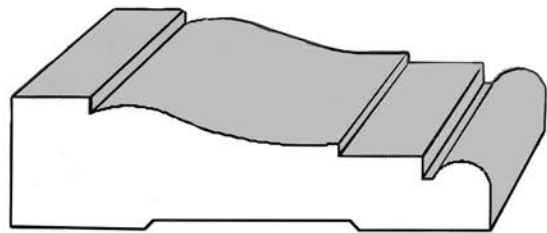


WM371
11/16" X 2-1/2"

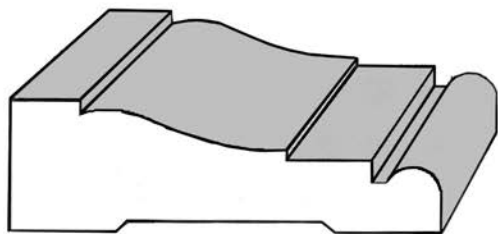


WM376
11/16" X 2-1/4"

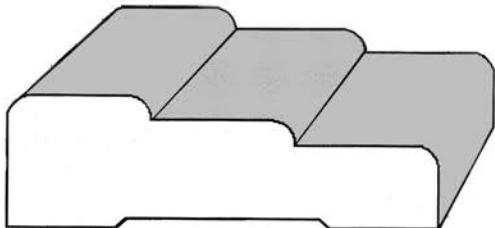


WM387
11/16" X 2-1/4"

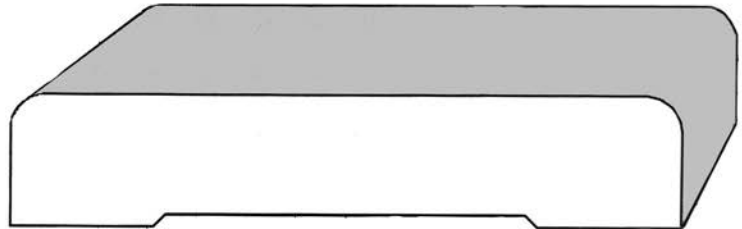

WM412
11/16" X 3-1/2"

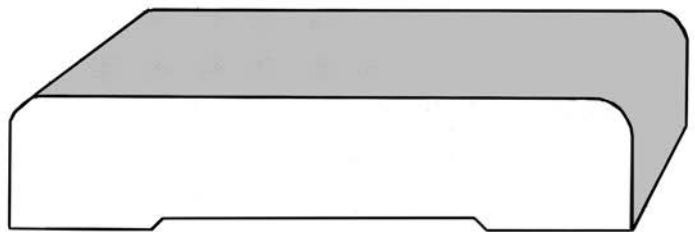


WM413
11/16" X 3-1/4"

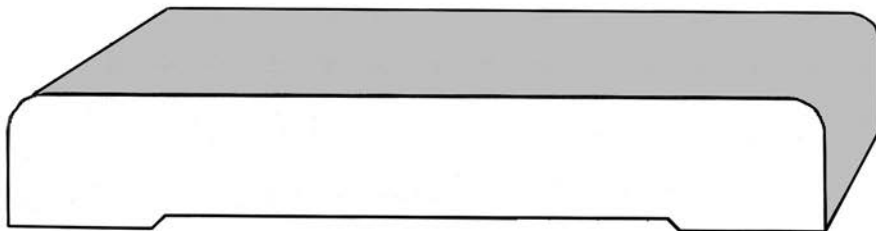


WM410
11/16" X 4-1/4"


Core Creek Molding Patterns - **CASING**

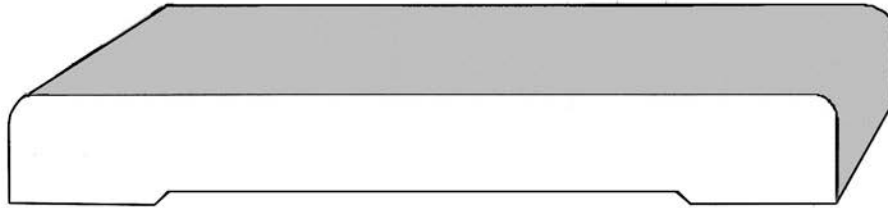


WM430
9/16" X 4-1/4"

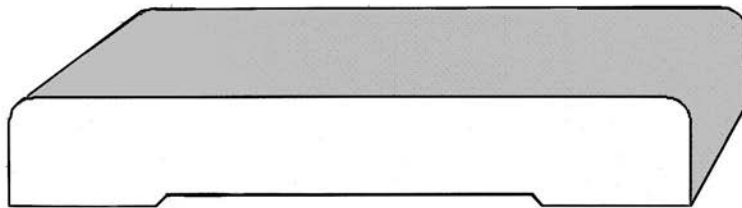


WM432
9/16" X 3-1/2"

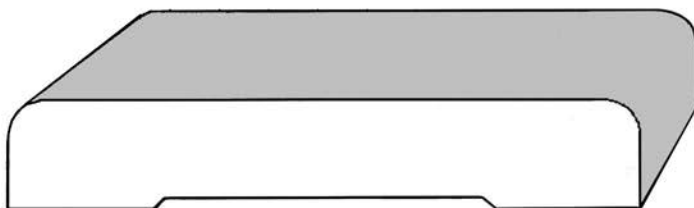


WM433
9/16" X 3-1/4"

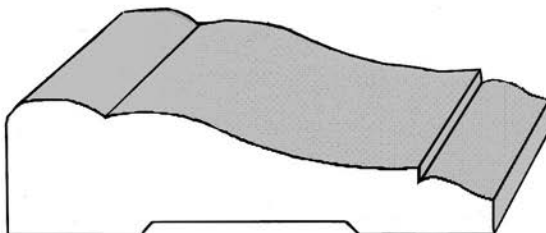


WM440
11/16" X 2-1/2"

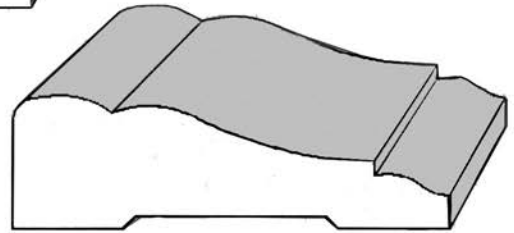

WM442
11/16" X 2-1/4"

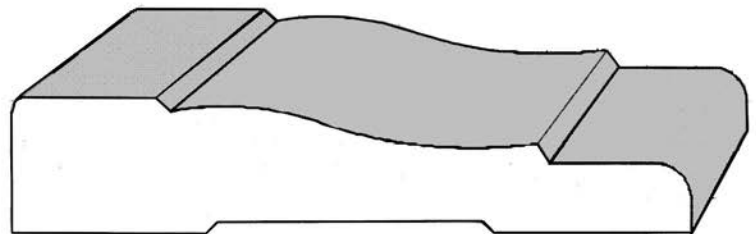


WM444
11/16" X 3-1/2"

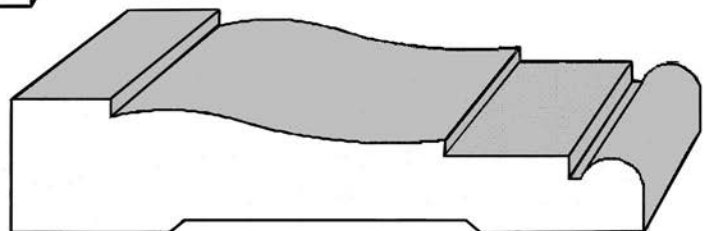


WM445
11/16" X 3-1/4"


CASING - Core Creek Molding Patterns

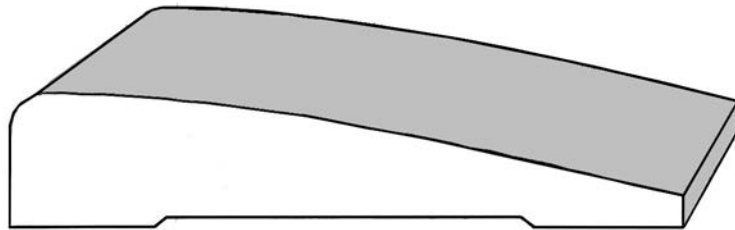

WM448
11/16" X 3-1/2"

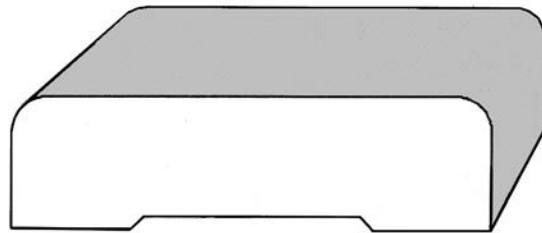


WM452
11/16" X 2-1/2"

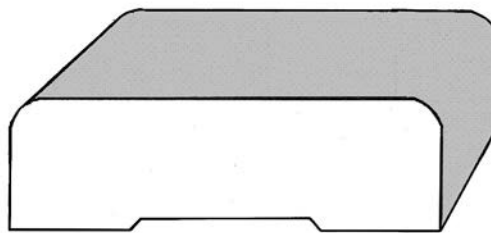

WM453
11/16" X 2-1/4"

Core Creek Molding Patterns - **CASING**

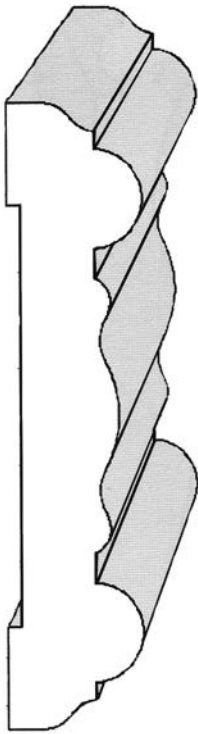

A41
3/4" X 3-1/4"




A42
3/4" X 4-1/4"




A43
3/4" X 4-1/4"


CASING - Core Creek Molding Patterns

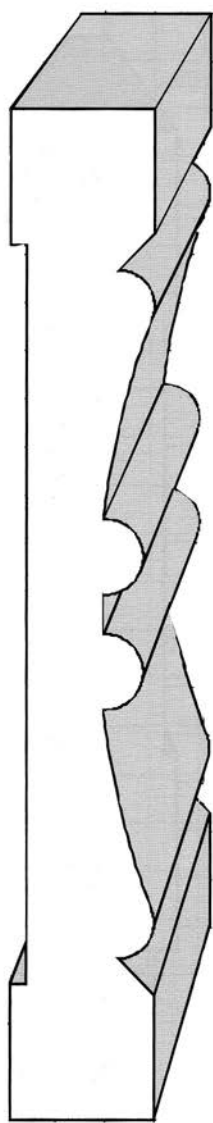

A44
3/4" X 5-1/4"

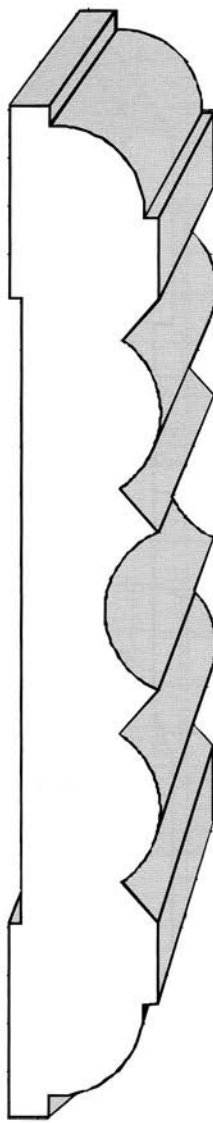


A45
3/4" X 5-1/4"

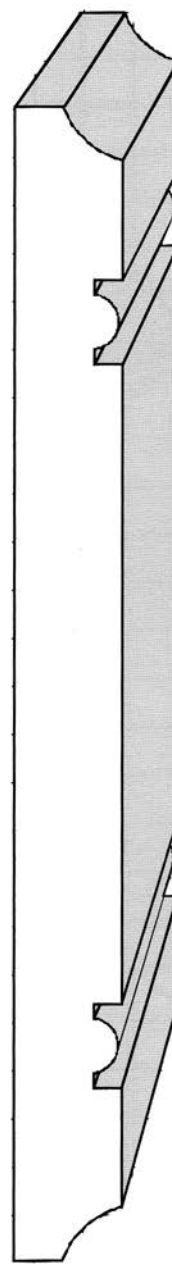


A46
9/16" X 6"


Core Creek Molding Patterns - **CASING**

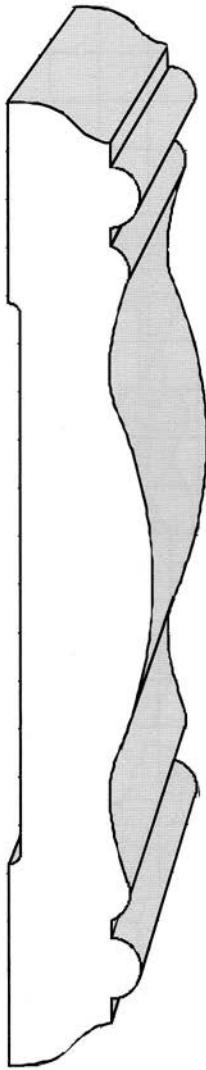

WM2000
3/4" X 5"

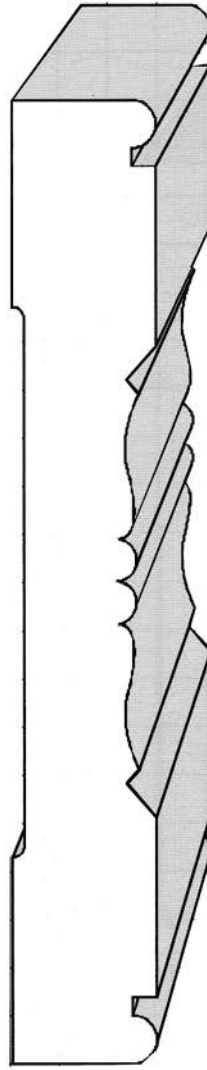


WM2001
3/4" X 5"

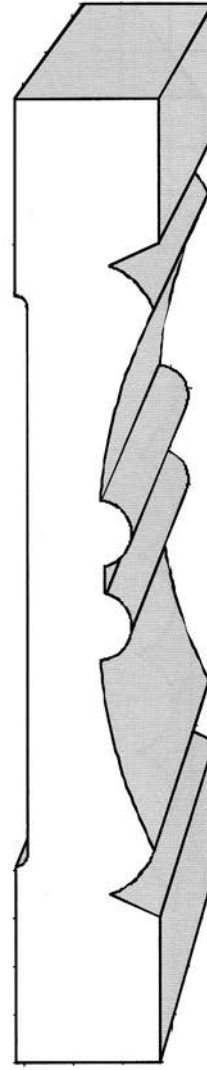

WM2002
3/4" X 5"

CASING - Core Creek Molding Patterns

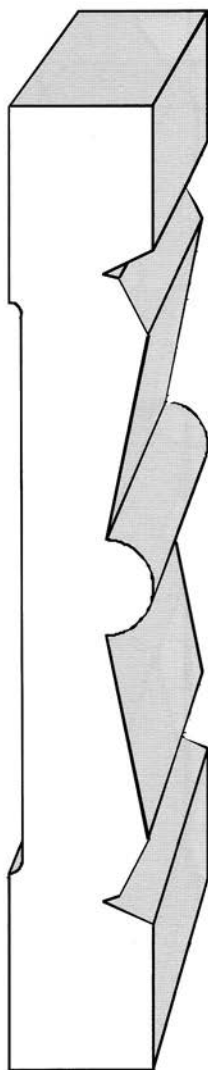

WM2003
3/4" X 5"




WM2004
3/4" X 3-1/2"



WM2005
1/2" X 2-3/4"

Core Creek Molding Patterns - **CASING**

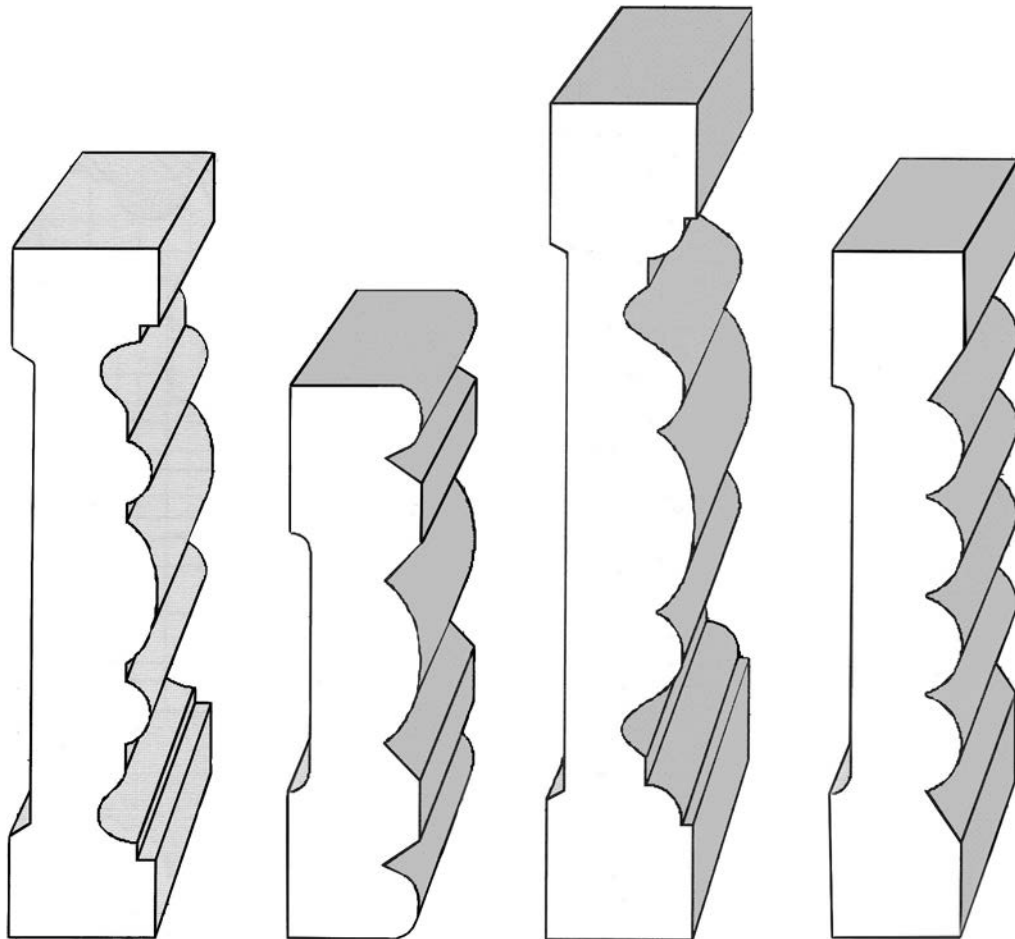

WM2006

3/4" X 3-1/2"

WM2007

11/16" X 2-13/16"


WM2008

3/4" X 4-1/4"


WM2009

11/16" X 3-1/2"


CASING - Core Creek Molding Patterns

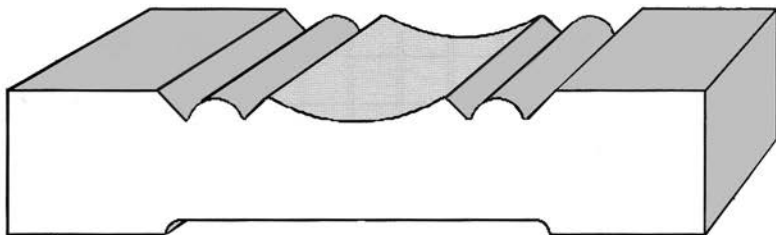


WM2010
3-5/8" x 3/4"

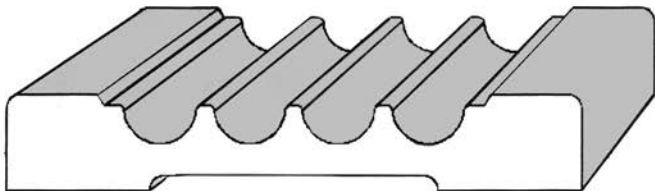


WM2011
3" x 1/2"

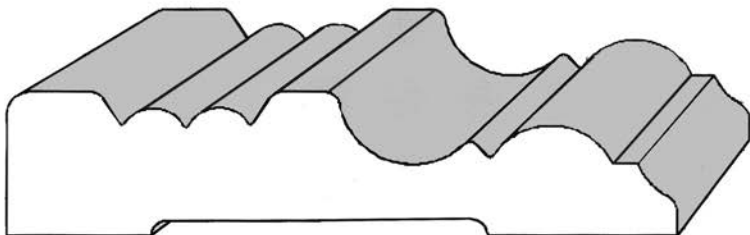

WM2012
3-1/2" x 3/4"






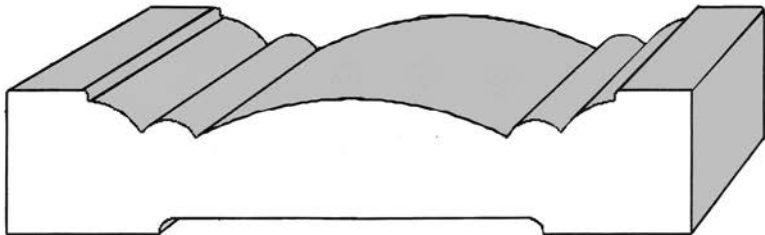


WM2013
3-9/16" x 3/4"






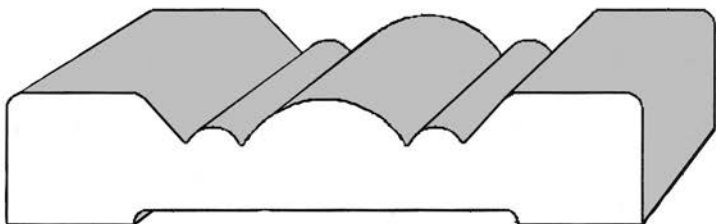


WM2014
3-5/16" x 5/8"






Core Creek Molding Pattern - **CASING**

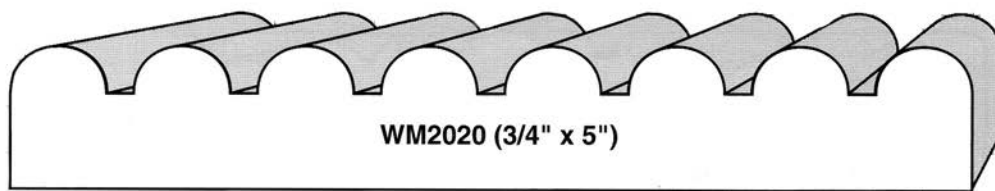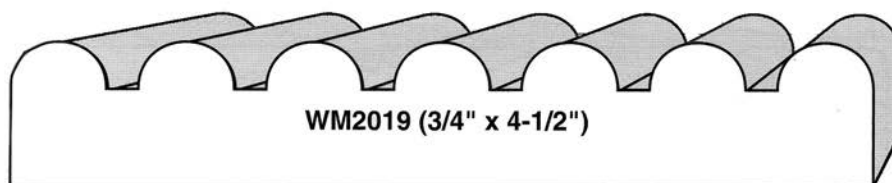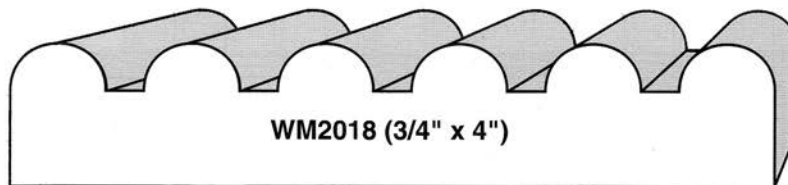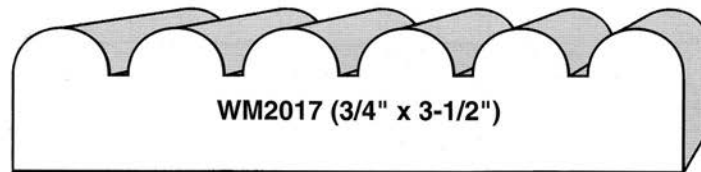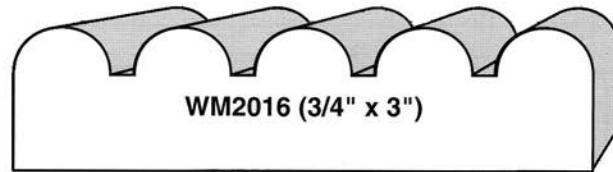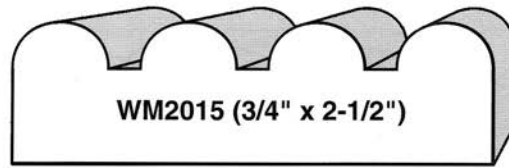







CASING - Core Creek Molding Patterns

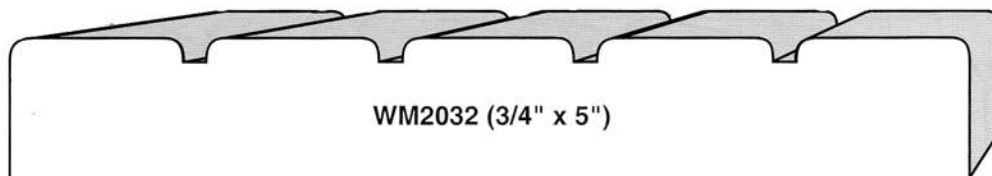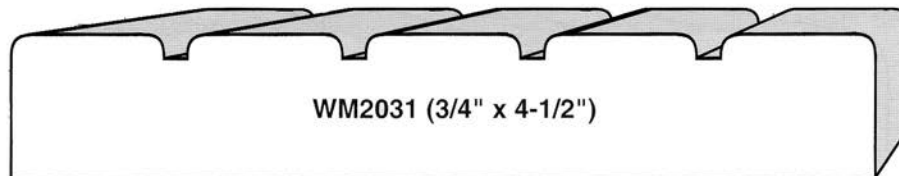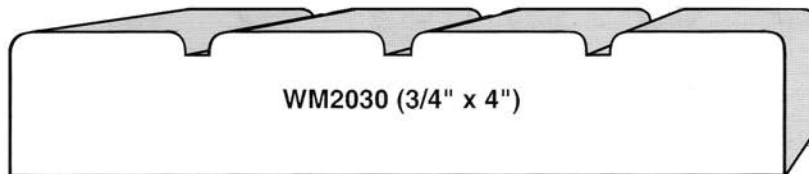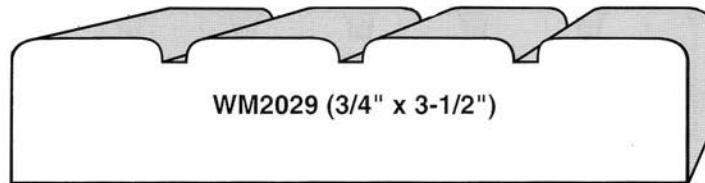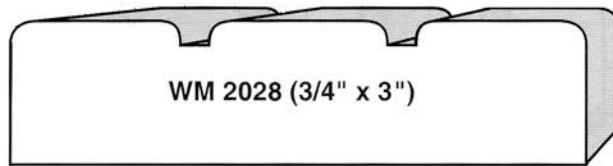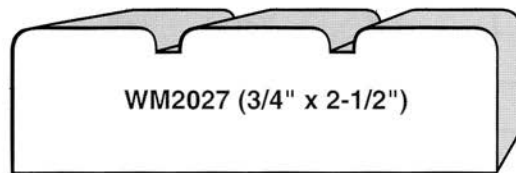







Core Creek Molding Patterns - **CASING**

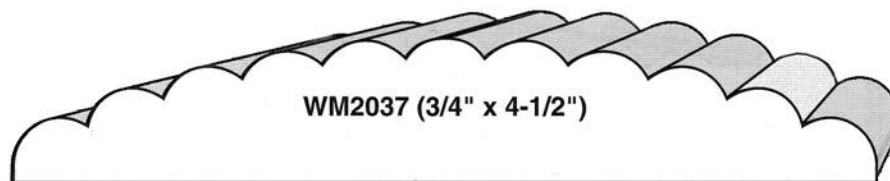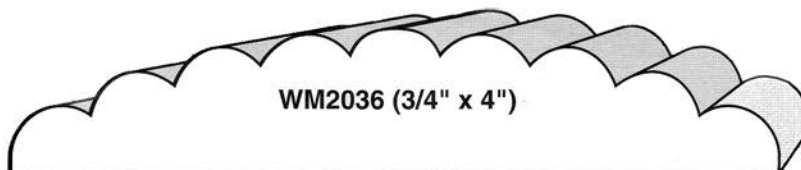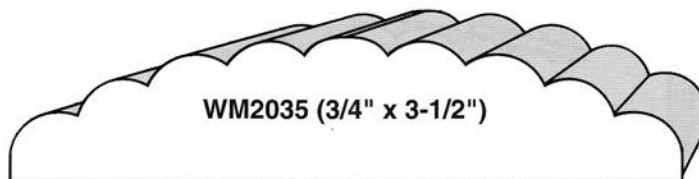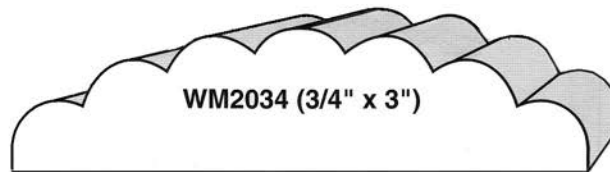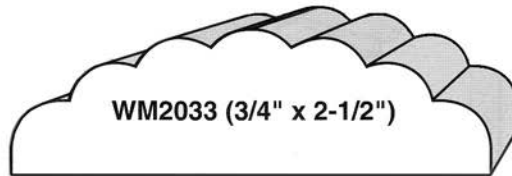






CASING - Core Creek Molding Patterns

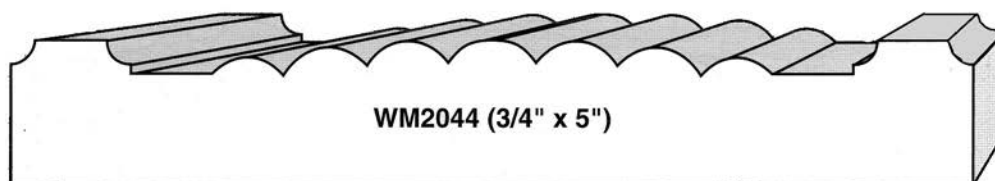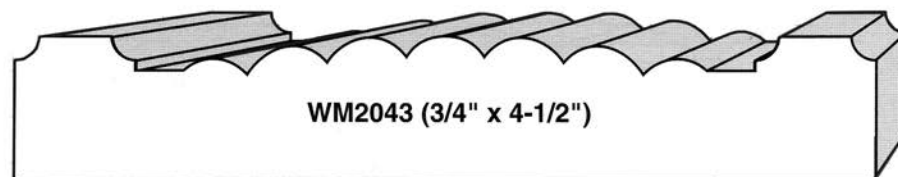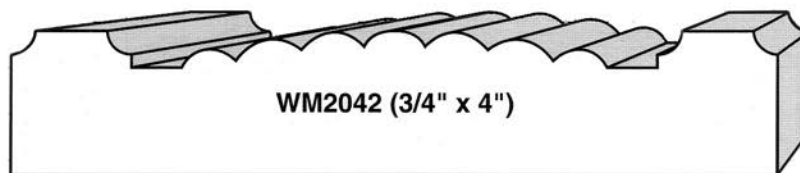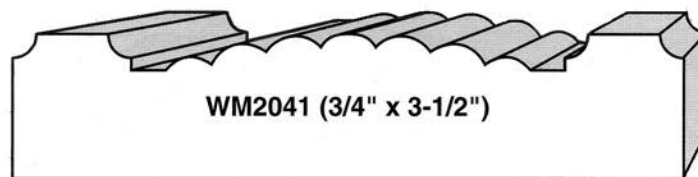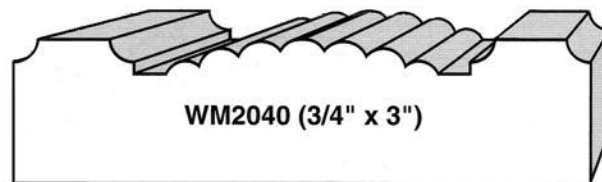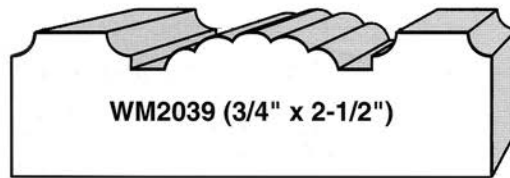







Core Creek Molding Patterns - **CASING**

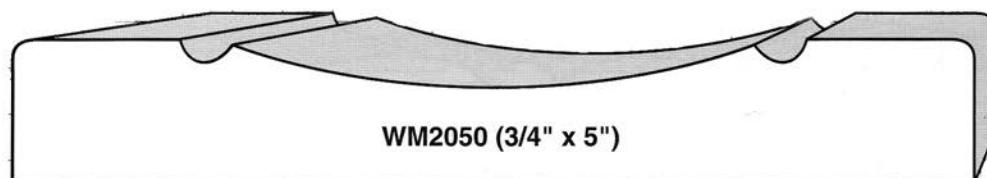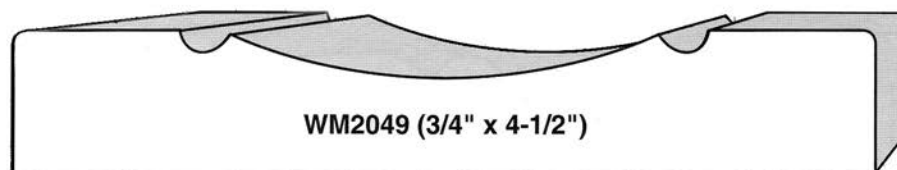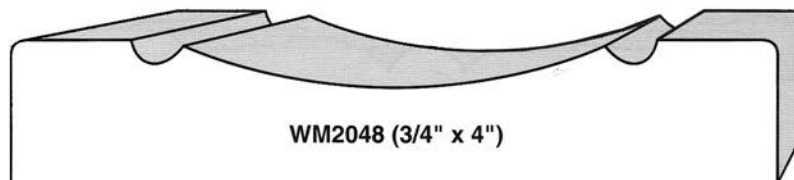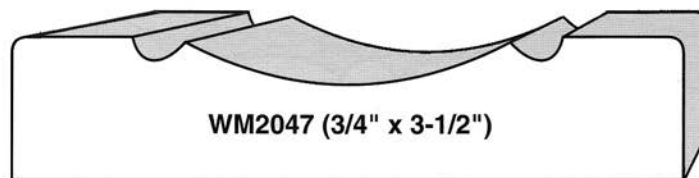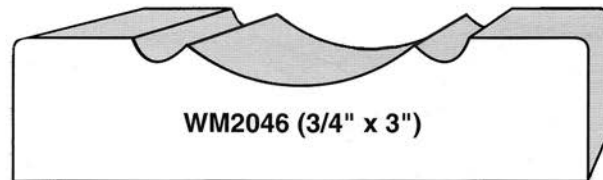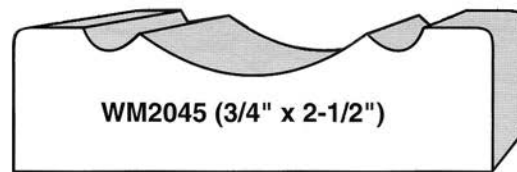






CASING - Core Creek Molding Patterns

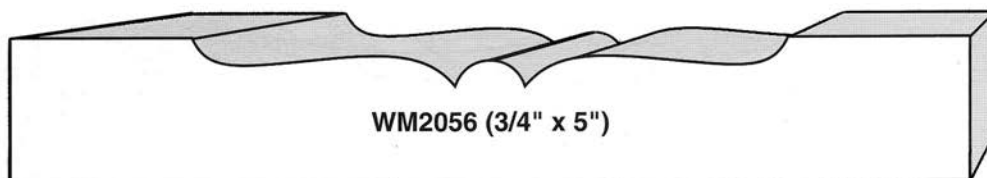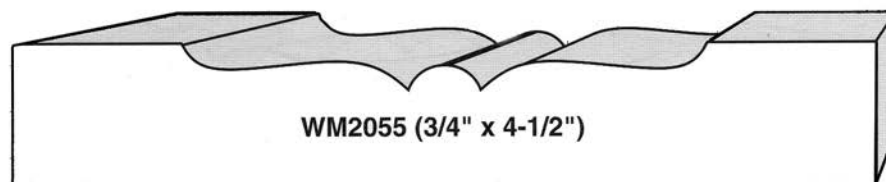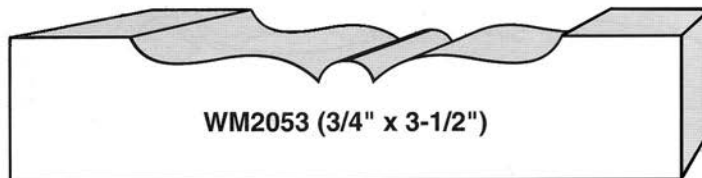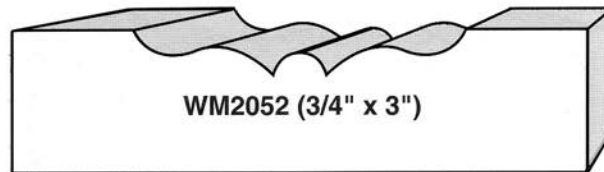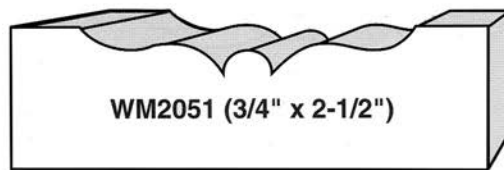







Core Creek Molding Patterns - **CASING**

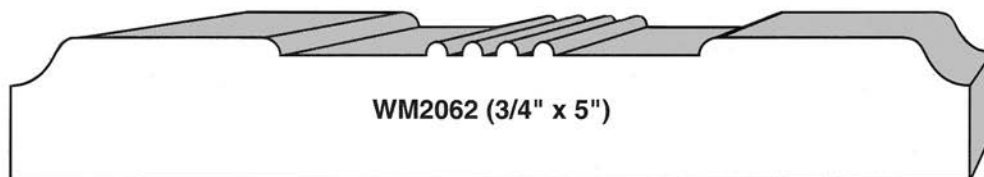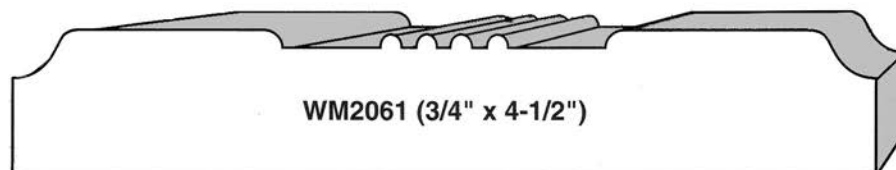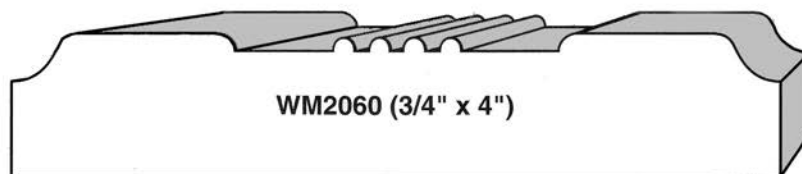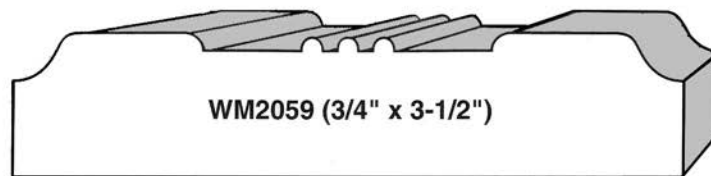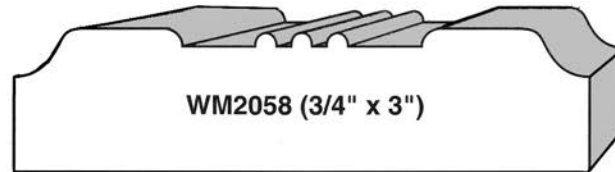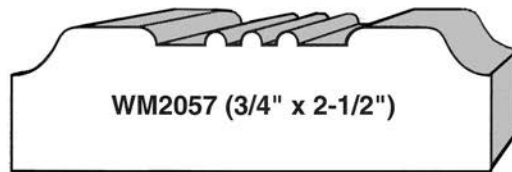







CASING - Core Creek Molding Patterns

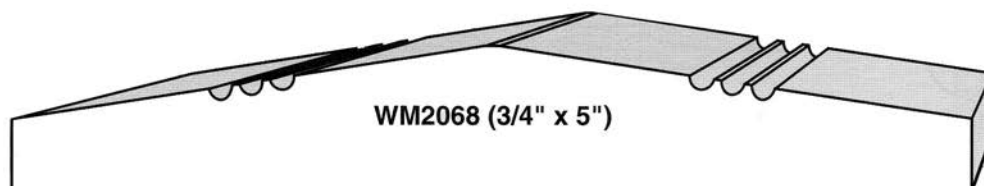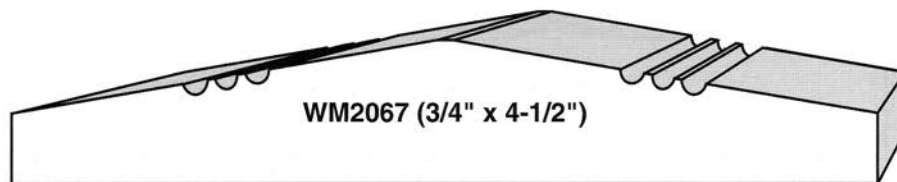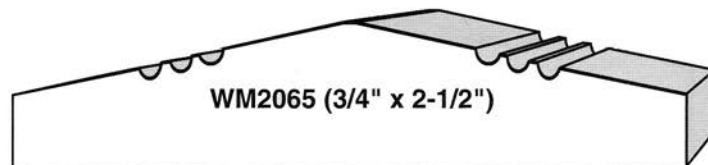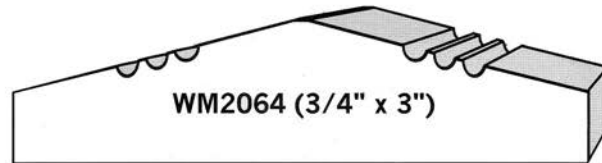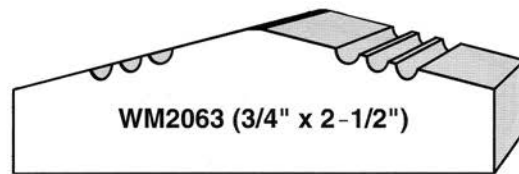





Core Creek Molding Patterns - **CASING**

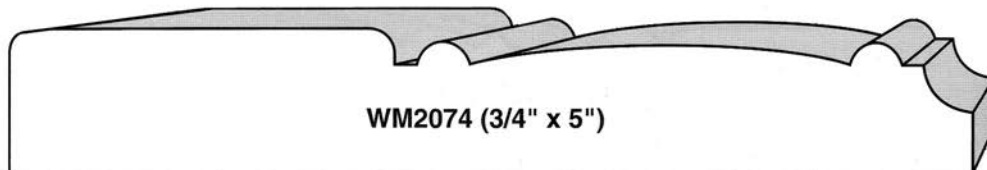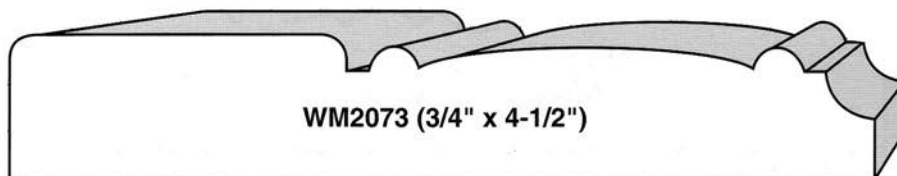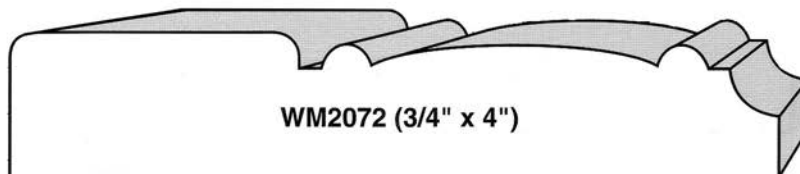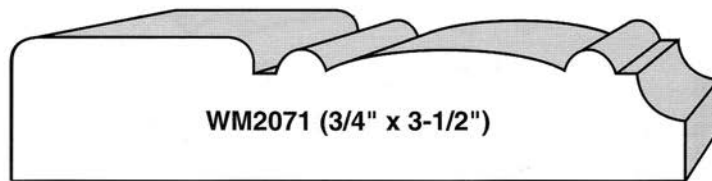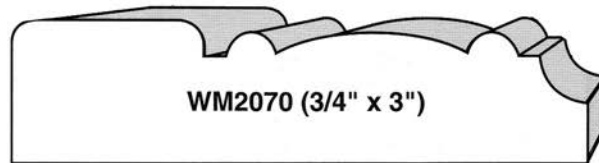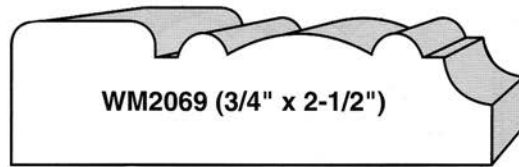







CASING - Core Creek Molding Patterns

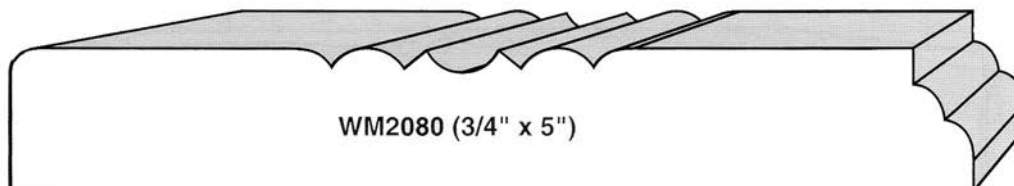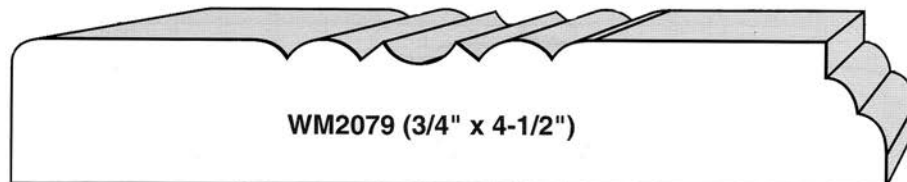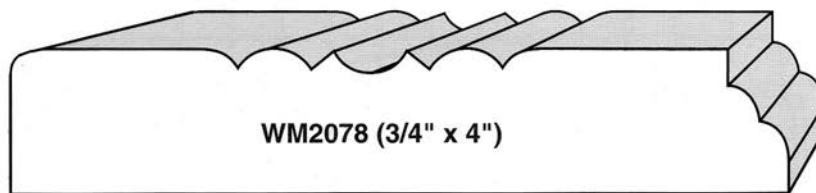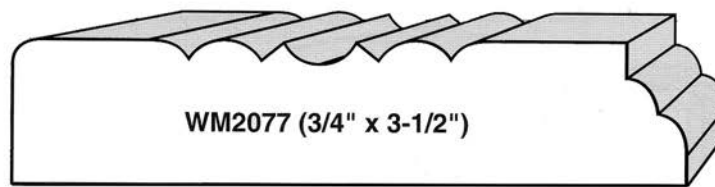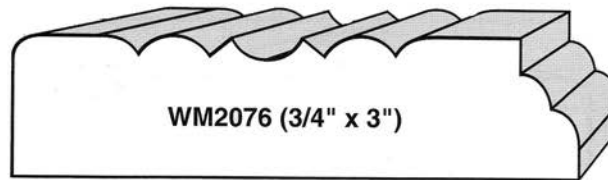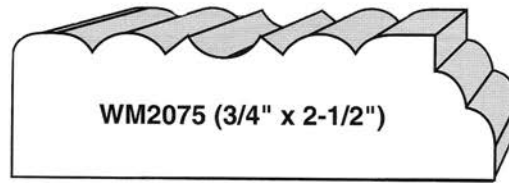







Core Creek Molding Patterns - **CASING**

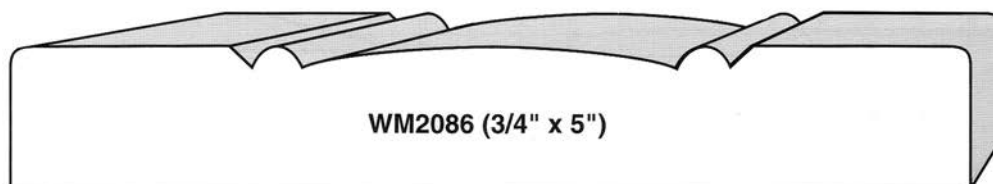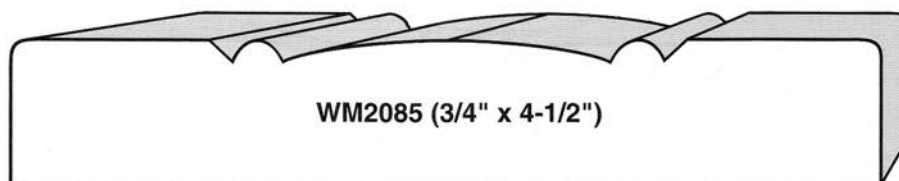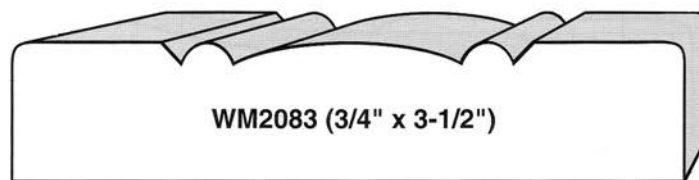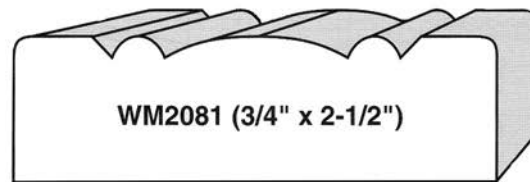







CASING - Core Creek Molding Patterns

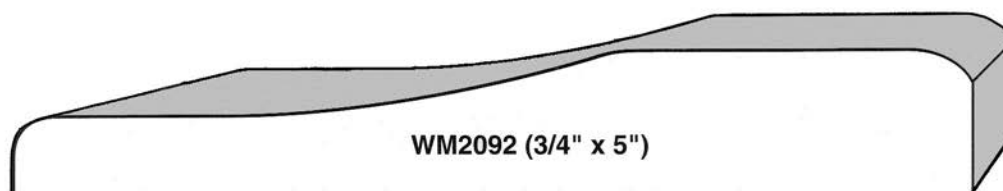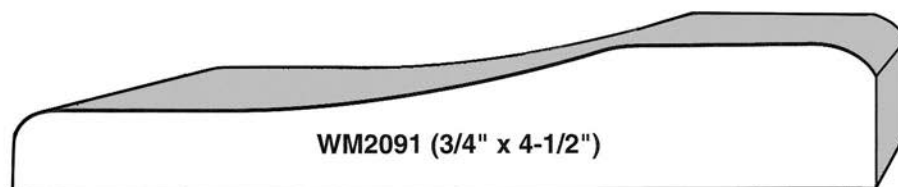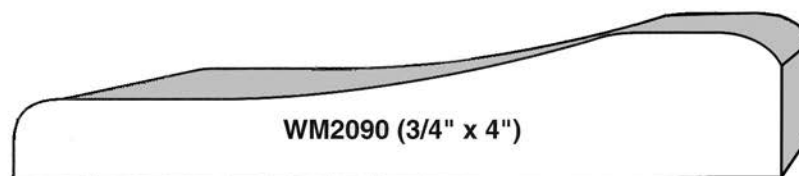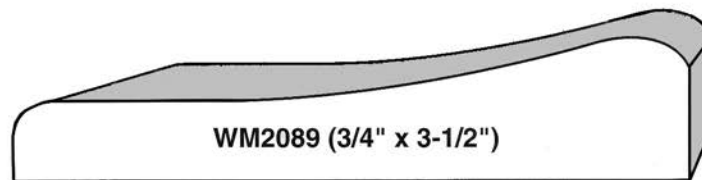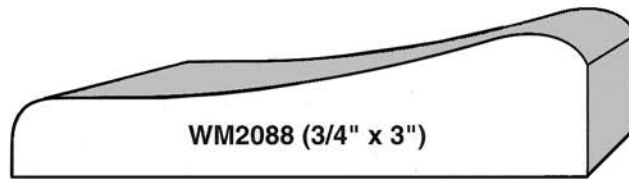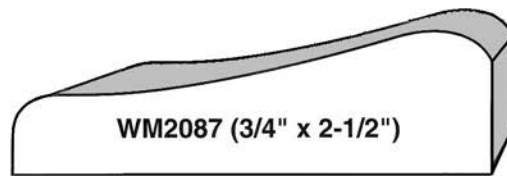

Core Creek Molding Patterns - **CASING**

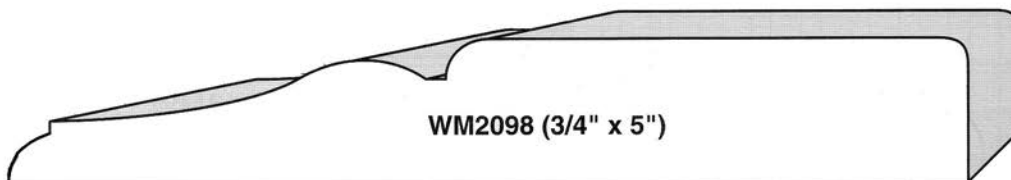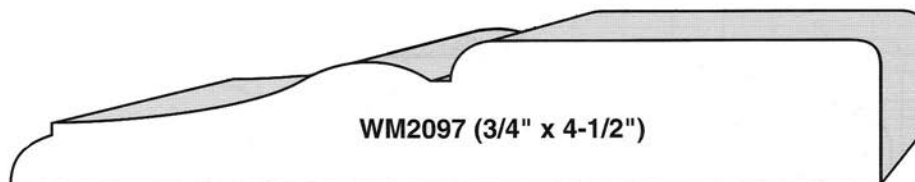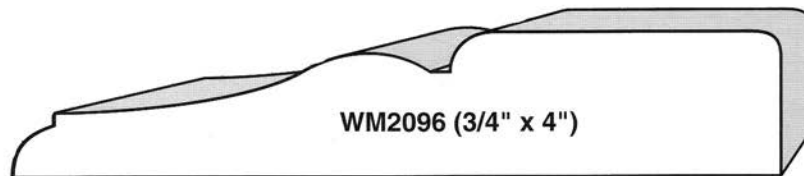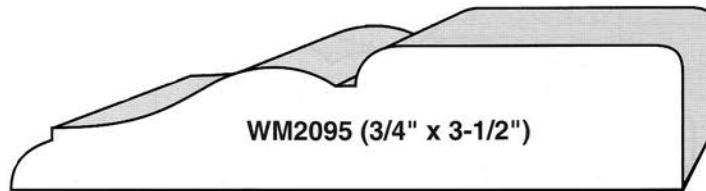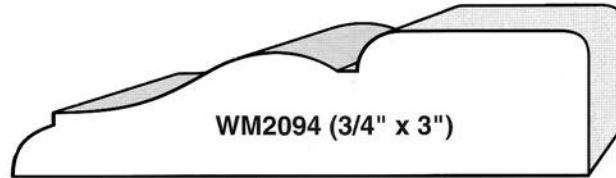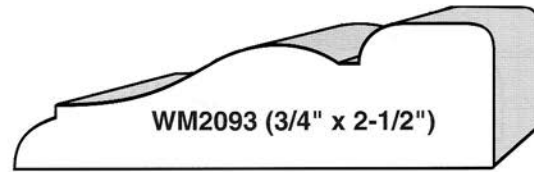


CASING - Core Creek Molding Patterns

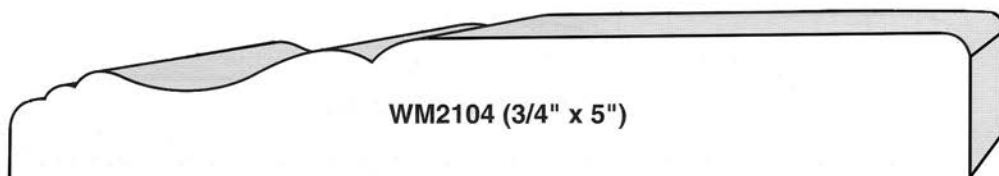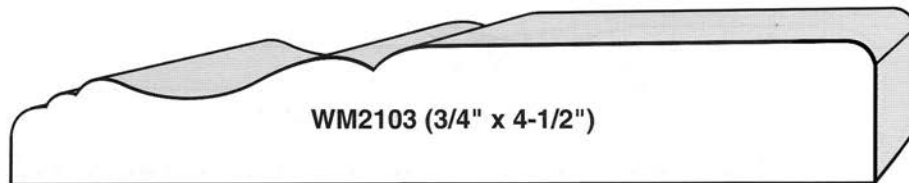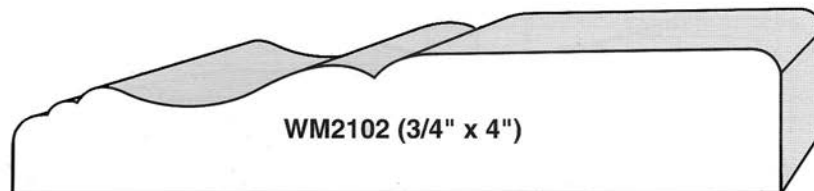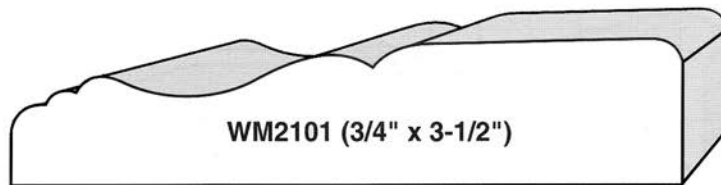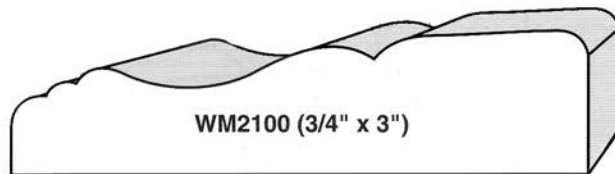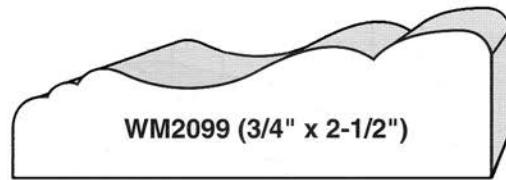


Core Creek Molding Patterns - **COLONIAL CASING**


Colonial Casing Patterns typically more intricate and wider than modern, ranch-style patterns. They are often used to surround large, wide openings.

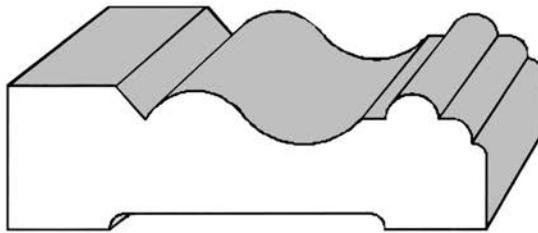


WM501
2-1/2" x 3/4"

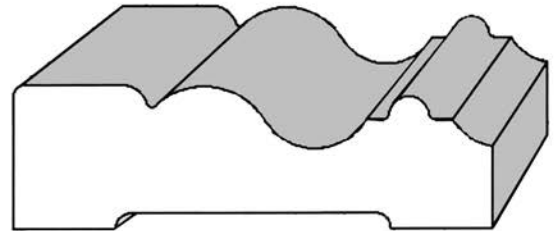


WM504
2-1/2" x 3/4"

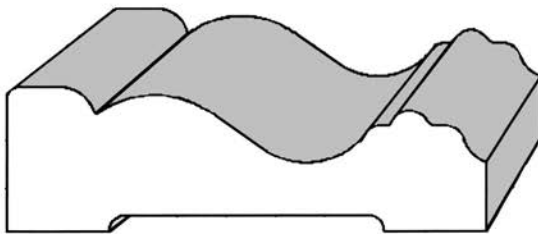

WM502
2-1/2" x 3/4"

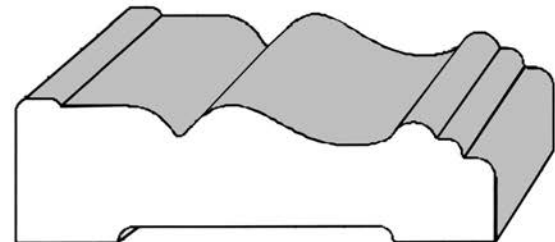


WM506
2-1/2" x 3/4"

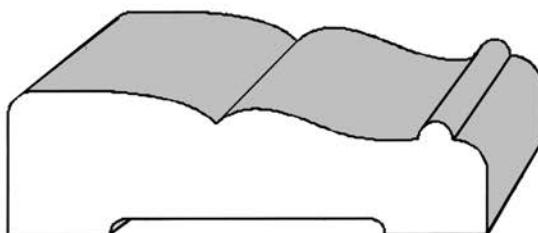


WM503
2-1/2" x 3/4"


COLONIAL CASING - Core Creek Molding Patterns

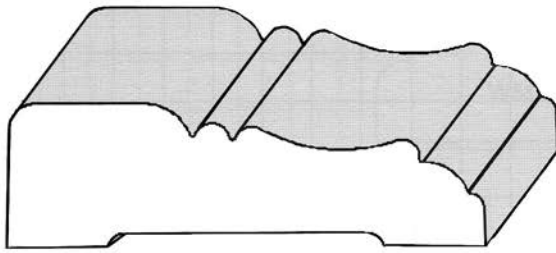


WM507
2-1/2" x 3/4"

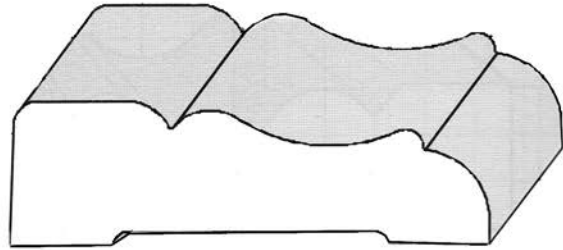


WM510
2-1/2" x 3/4"

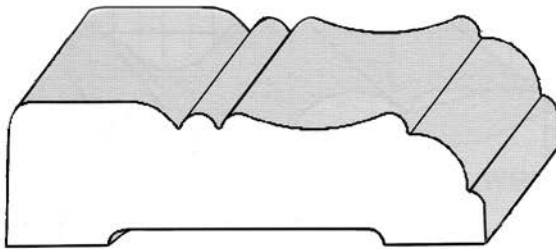


WM508
2-1/2" x 3/4"

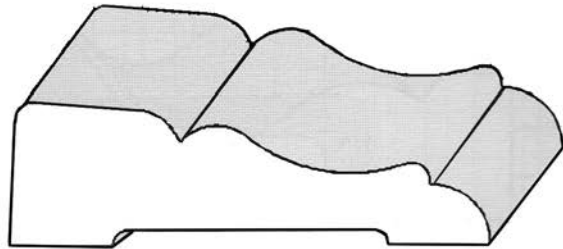

WM511
2-1/2" x 3/4"

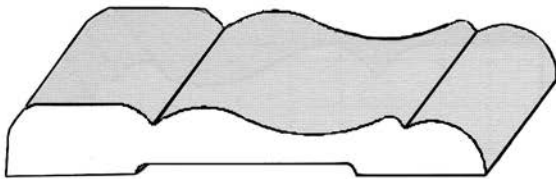


WM509
2-1/2" x 3/8"

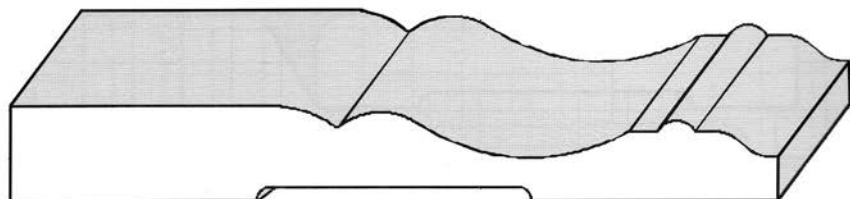


WM512
4" x 1/2"

Core Creek Molding Patterns - **BASE**


Base molding is applied where walls and floors meet, forming a pleasing visual foundation for the room. It protects the walls from damage from furniture and vacuum cleaners, and neatly hides uneven junctions of floor and wall.

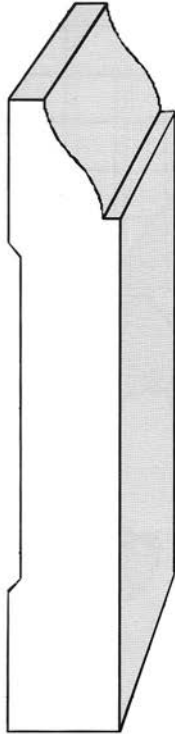


WM618 9/16" X 5-1/4"
WM620 9/16" X 4-1/4"
WM622 9/16" X 3-1/2"
WM623 9/16" X 3-1/4" (Illus.)
WM624 9/16" X 3"

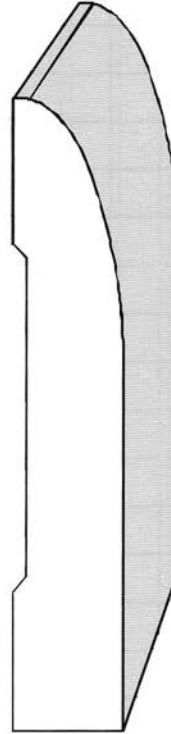

WM709 9/16" X 4-1/2"
WM710 9/16" X 4-1/4"
WM712 9/16" X 3-1/2"
WM713 9/16" X 3-1/4" (Illu
WM714 9/16" X 3"

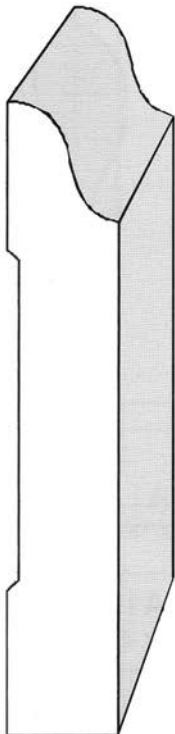


WM658 9/16" X 5-1/4"
WM660 9/16" X 4-1/4"
WM662 9/16" X 3-1/2"
WM663 9/16" X 3-1/4" (Illus.)
WM664 9/16" X 3"

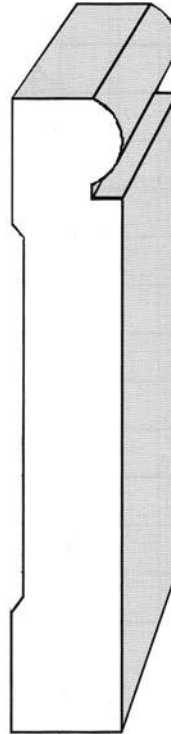


WM750 9/16" X 4-1/4"
WM752 9/16" X 3-1/2"
WM753 9/16" X 3-1/4" (Illu


BASE - Core Creek Molding Patterns

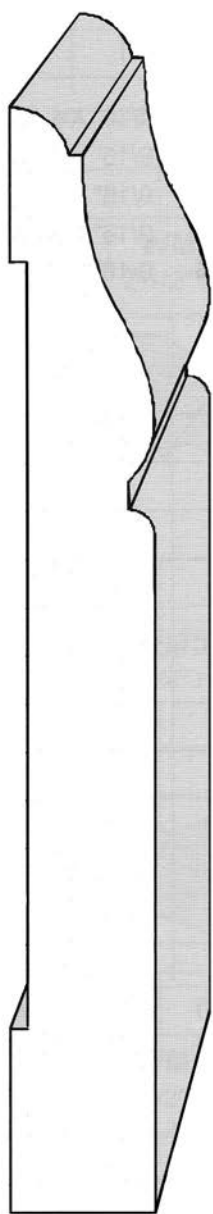

A11
3/4" X 5-3/4"

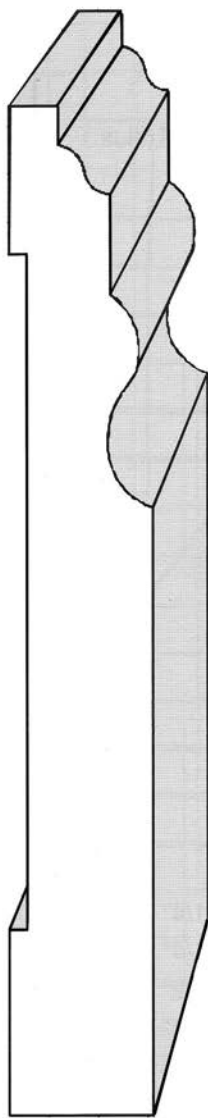

A12
3/4" X 5-1/4"

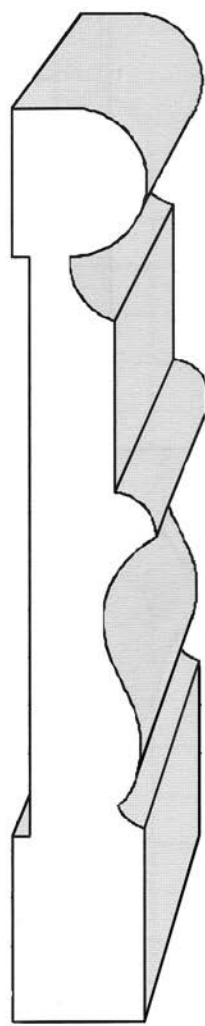


A13
3/4" X 4-3/4"


Core Creek Molding Patterns - **BASE**



A14
3/4" X 4-3/4"

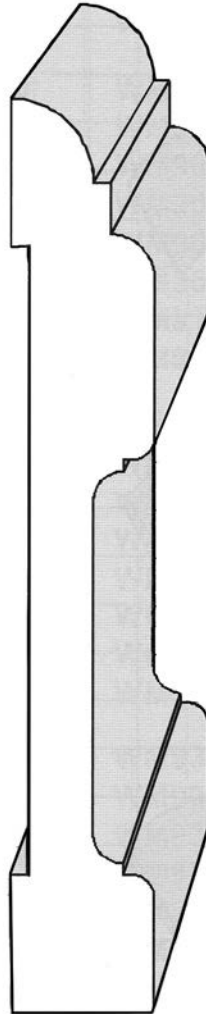


A15
3/4" X 4-3/4"

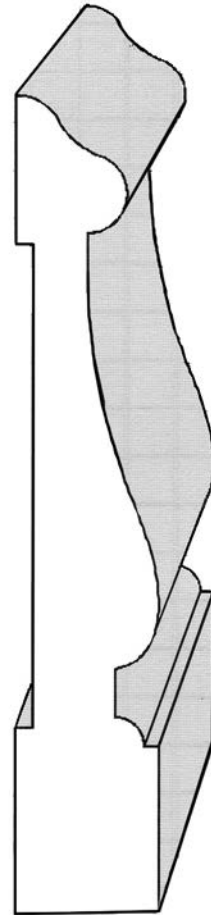


A16
3/4" X 4-1/4"

STOP - Core Creek Molding patterns


Stop molding is used in trimming windows and doors and is nailed to the face of the frame. It keeps a window sash in place and prevents a door from swinging through.

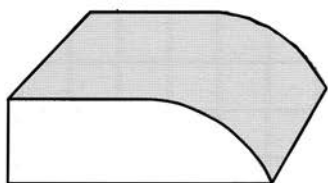


WM813	7/16" X 2-1/4"
WM814	7/16" X 1-3/4"
WM815	7/16" X 1-5/8"
WM816	7/16" X 1-3/8" (Illus.)
WM817	7/16" X 1-1/4"
WM818	7/16" X 1-1/8"
WM820	7/16" X 7/8"

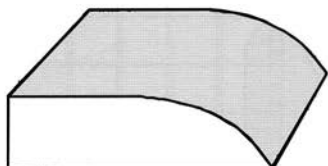


WM823	3/8" X 2-1/4"
WM824	3/8" X 1-3/4"
WM825	3/8" X 1-5/8"
WM826	3/8" X 1-3/8" (Illus.)
WM827	3/8" X 1-1/4"
WM828	3/8" X 1-1/8"
WM830	3/8" X 7/8"
WM831	3/8" X 3/4"

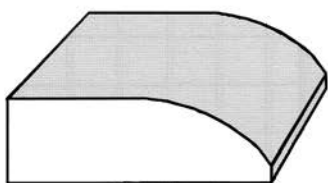

WM843	7/16" X 2-1/4"
WM844	7/16" X 1-3/4"
WM845	7/16" X 1-5/8"
WM846	7/16" X 1-3/8" (Illus.)
WM847	7/16" X 1-1/4"
WM848	7/16" X 1-1/8"
WM850	7/16" X 7/8"
WM851	7/16" X 3/4"

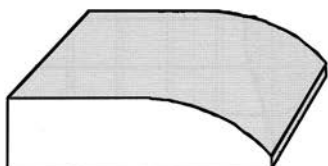


WM853	3/8" X 2-1/4"
WM854	3/8" X 1-3/4"
WM855	3/8" X 1-5/8"
WM856	3/8" X 1-3/8" (Illus.)
WM857	3/8" X 1-1/4"
WM858	3/8" X 1-1/8"
WM860	3/8" X 7/8"
WM861	3/8" X 3/4"

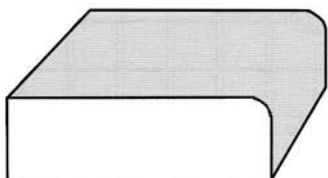


WM873	7/16" X 2-1/4"
WM874	7/16" X 1-3/4"
WM875	7/16" X 1-5/8"
WM876	7/16" X 1-3/8" (Illus.)
WM877	7/16" X 1-1/4"
WM878	7/16" X 1-1/8"
WM880	7/16" X 7/8"
WM881	7/16" X 3/4"


Core Creek Molding Patterns - STOP

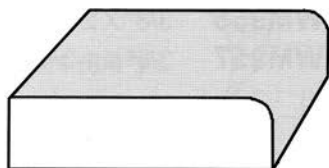


WM883	3/8" X 2-1/4"
WM884	3/8" X 1-3/4"
WM885	3/8" X 1-5/8"
WM886	3/8" X 1-3/8" (Illus.)
WM887	3/8" X 1-1/4"
WM888	3/8" X 1-1/8"
WM890	3/8" X 7/8"
WM891	3/8" X 3/4"

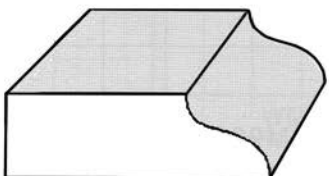


WM903	7/16" X 2-1/4"
WM904	7/16" X 1-3/4"
WM905	7/16" X 1-5/8"
WM906	7/16" X 1-3/8" (Illus.)
WM907	7/16" X 1-1/4"
WM908	7/16" X 1-1/8"
WM910	7/16" X 7/8"
WM911	7/16" X 3/4"

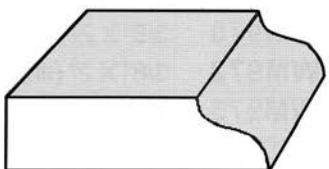

WM913	3/8" X 2-1/4"
WM914	3/8" X 1-3/4"
WM915	3/8" X 1-5/8"
WM916	3/8" X 1-3/8" (Illus.)
WM917	3/8" X 1-1/4"
WM918	3/8" X 1-1/8"
WM920	3/8" X 7/8"
WM921	3/8" X 3/4"

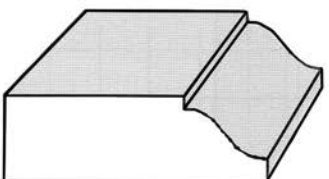


WM933	7/16" X 2-1/4"
WM934	7/16" X 1-3/4"
WM935	7/16" X 1-5/8"
WM936	7/16" X 1-3/8" (Illus.)
WM937	7/16" X 1-1/4"
WM938	7/16" X 1-1/8"
WM940	7/16" X 7/8"
WM941	7/16" X 3/4"

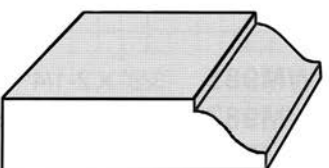


WM943	3/8" X 2-1/4"
WM944	3/8" X 1-3/4"
WM945	3/8" X 1-5/8"
WM946	3/8" X 1-3/8" (Illus.)
WM947	3/8" X 1-1/4"
WM948	3/8" X 1-1/8"
WM950	3/8" X 7/8"
WM951	3/8" X 3/4"

PANEL STRIP / MULLION CASING - Core Creek Patterns


These shapes are commonly used to cover and hide the seam where two or more pieces of paneling join, or simply as wall surface decoration. As mullions, they are applied over the window jambs in a multiple-opening window.

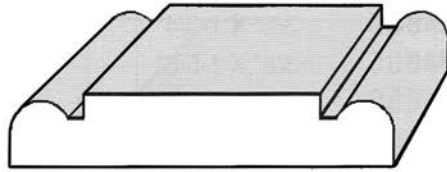


WM955 3/8" X 2-1/4"
WM956 3/8" X 2" (Illus.)
WM957 3/8" X 1-3/4"

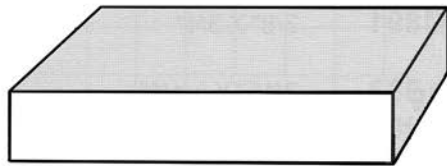


WM960 3/8" X 2-1/4"
WM962 3/8" X 2" (Illus.)
WM963 3/8" X 1-3/4"

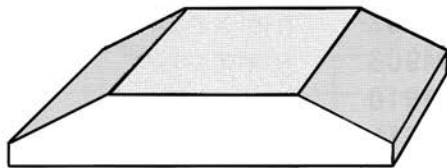


WM965 3/8" X 2-1/4"
WM967 3/8" X 2" (Illus.)
WM968 3/8" X 1-3/4"

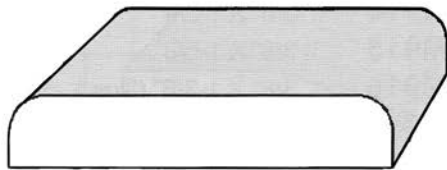


WM970 3/8" X 2-1/4"
WM972 3/8" X 2" (Illus.)
WM973 3/8" X 1-3/4"

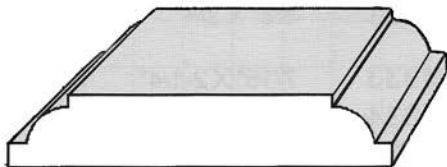

WM975 3/8" X 2-1/4"
WM977 3/8" X 2" (Illus.)
WM978 3/8" X 1-3/4"

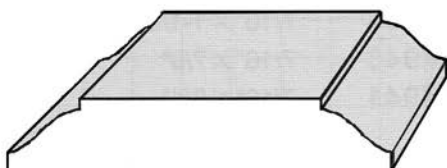




WM980 3/8" X 2-1/4"
WM982 3/8" X 2" (Illus.)
WM983 3/8" X 1-3/4"

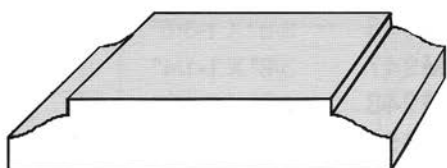

WM985 3/8" X 2-1/4"
WM987 3/8" X 2" (Illus.)
WM988 3/8" X 1-3/4"



Core Creek Molding Patterns - BULLNOSE

Bullnose is similar to 1/2 round which would be 1/2 of a circle. Common places you would use bullnose would be on stair tread returns.

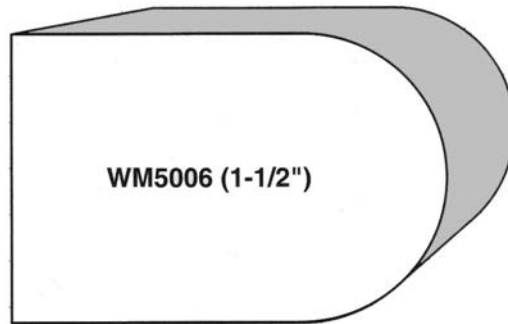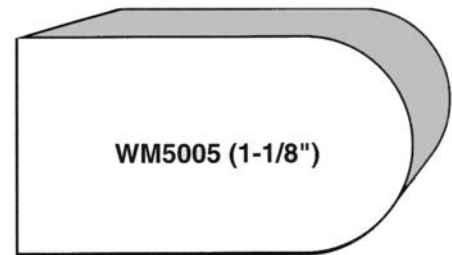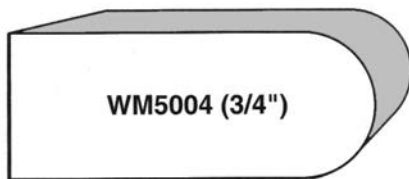


BRICK - Core Creek Molding Patterns

Brick molding is a strip of material used to close the small gap between a brick wall and the frame of a door or window set into the wall. Hardwood was the traditional material used for brick molding. Because hardwoods are resistant to rot and moisture damage, hardwood brick molding has a long service life, sometimes as long as 50 years. Today, brick molding is often made of softwood with a life of only 15 years. Core Creek Custom Woodwork can make these using PVC materials for exceptional longevity.

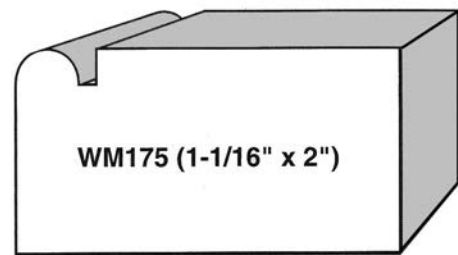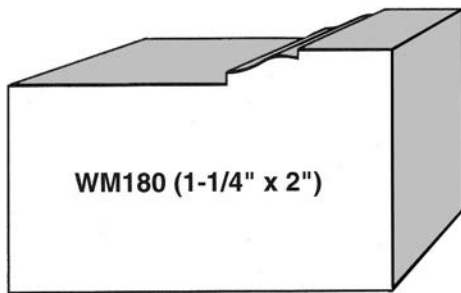


Core Creek Molding Patterns - PLINTH


Plinth molding patterns are most often used in combination with matching, square, plinth blocks surrounding a door or window.

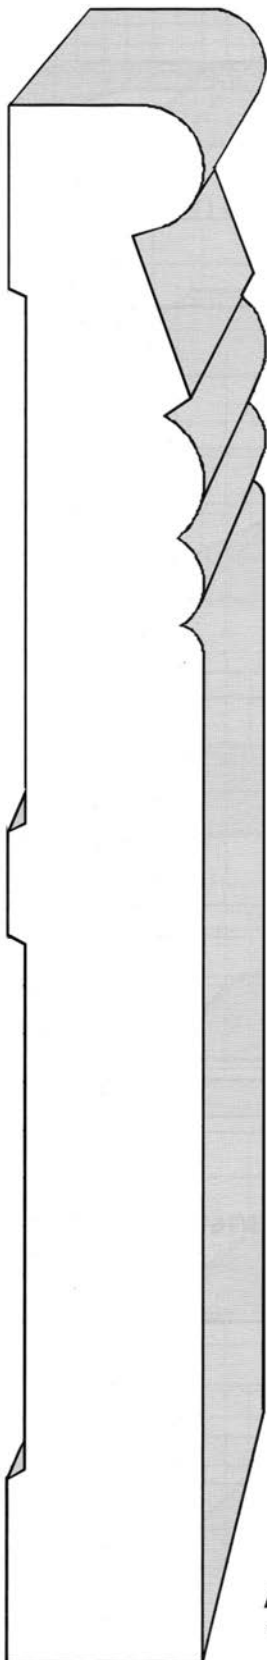

A48A
1" X 8"

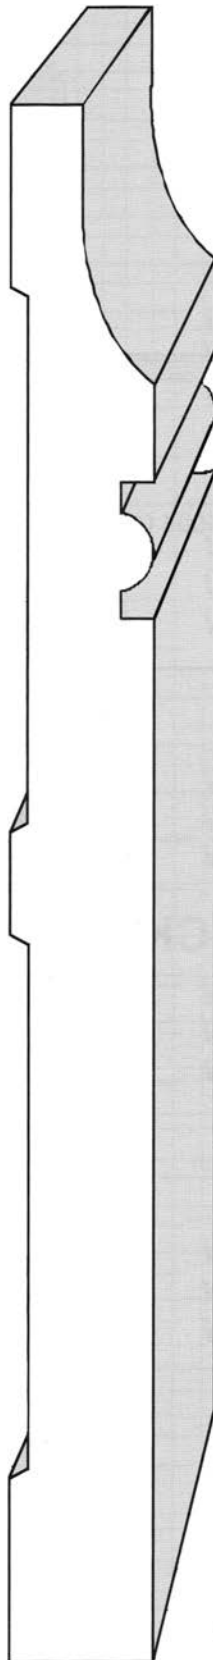


A49A
3/4" X 8"

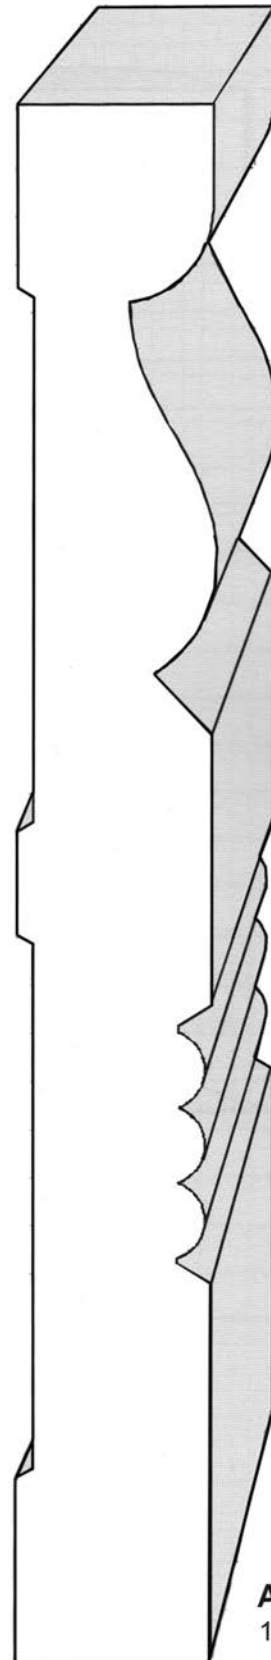

A50A
1" X 8"



WOOD PLANK PANELING - Core Creek Patterns

Wood Plank Paneling is a handsome way to add a finishing touch to any room. Shiplap design make installation relatively simple.

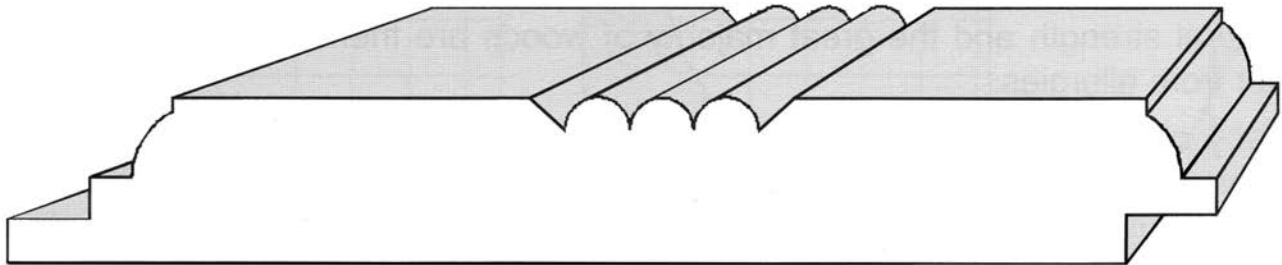


PS81

5-1/2" X 3/4"

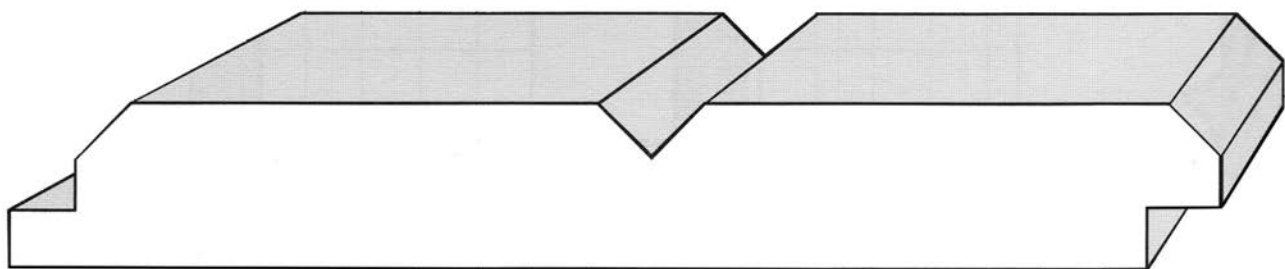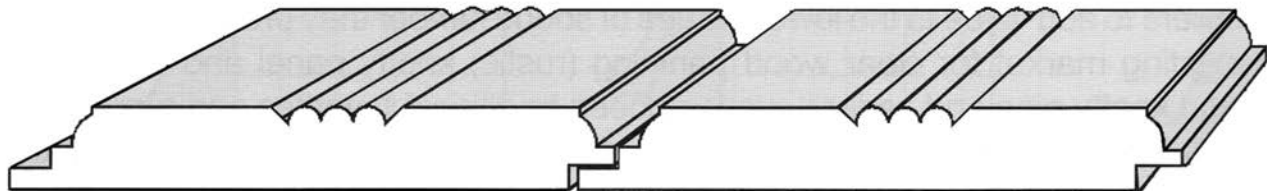


PS83



5-1/2" X 3/4"

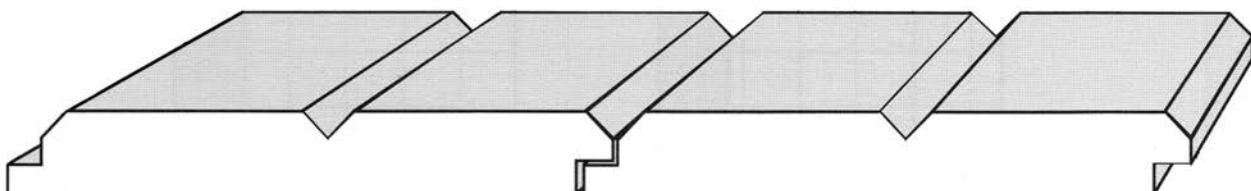


Core Creek Patterns - WOOD PLANK PANELING

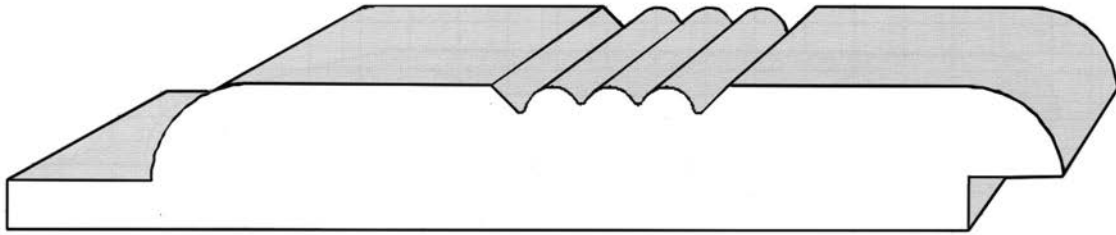


PS84
5-1/2" X 3/4"

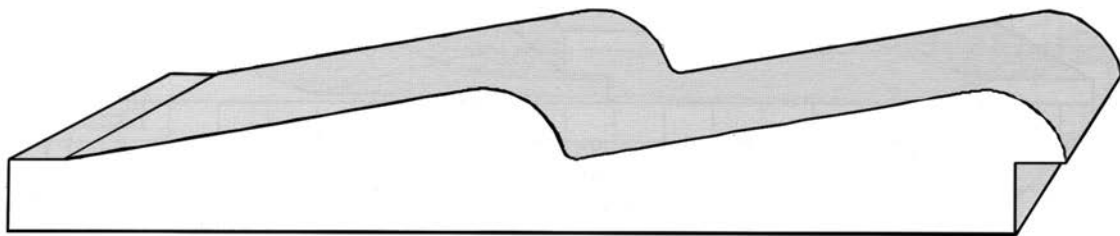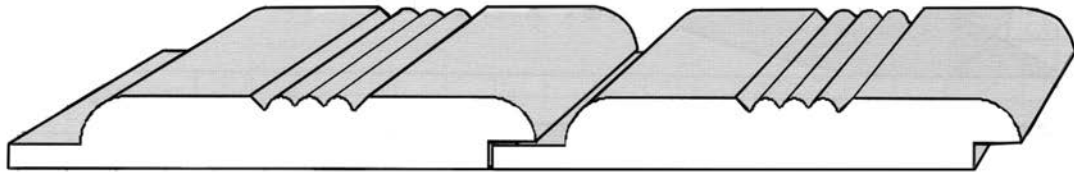


PS85
5-1/2" X 3/4"

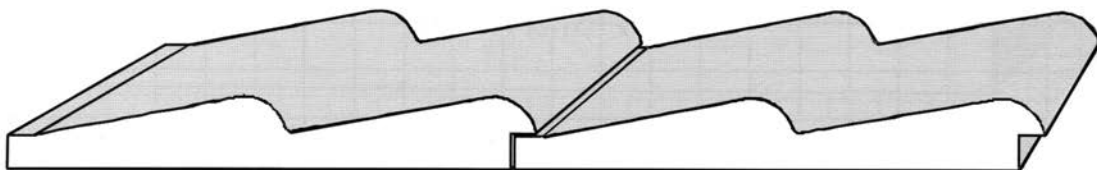








WOOD PLANK PANELING - Core Creek Patterns

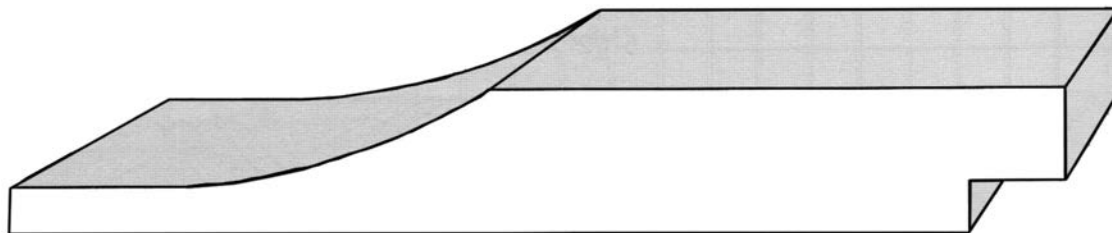

PS86
5-1/2" X 3/4"



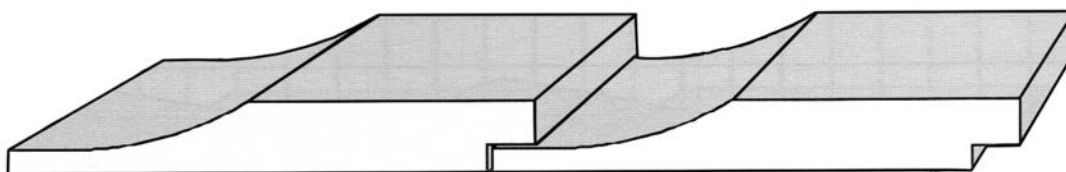


Core Creek Patterns - WOOD PLANK PANELING

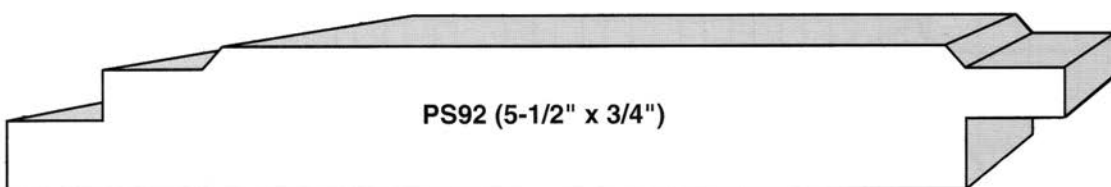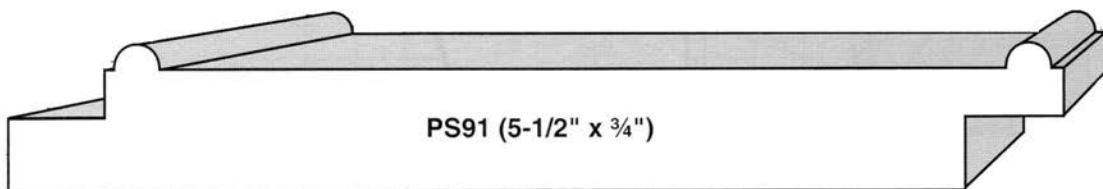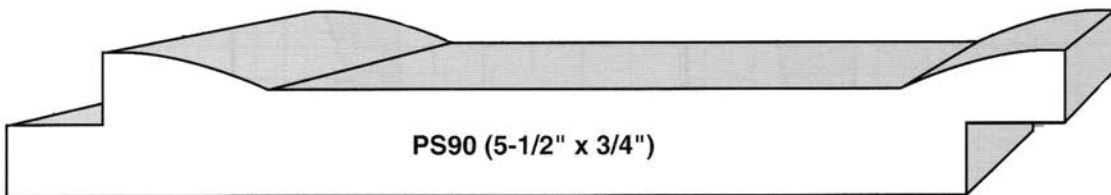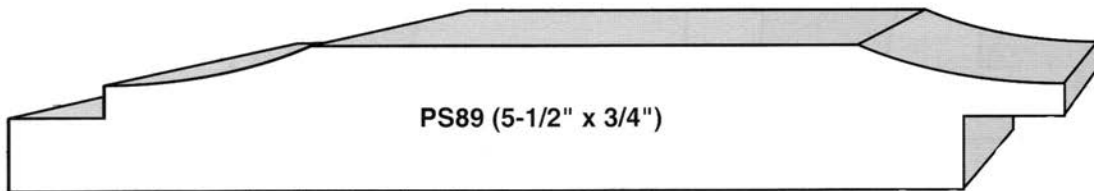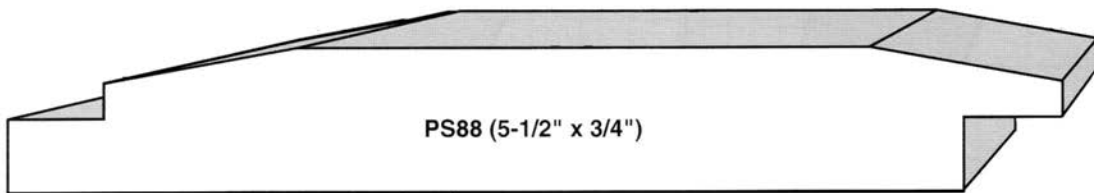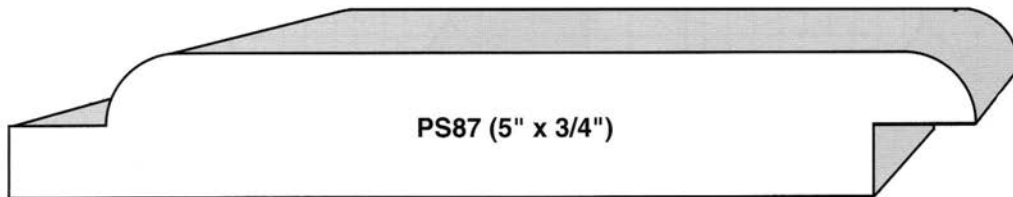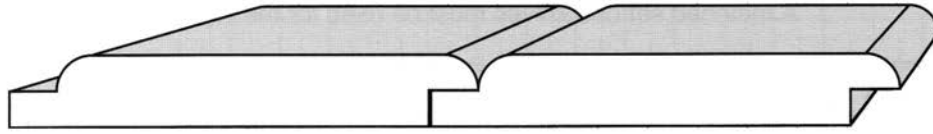


LOG CABIN SIDING - Core Creek Molding Patterns


This siding has a rounded outside surface for "looks" and a flat inside surface for easy installation. Ship-lap design avoids gaps and shed moisture.

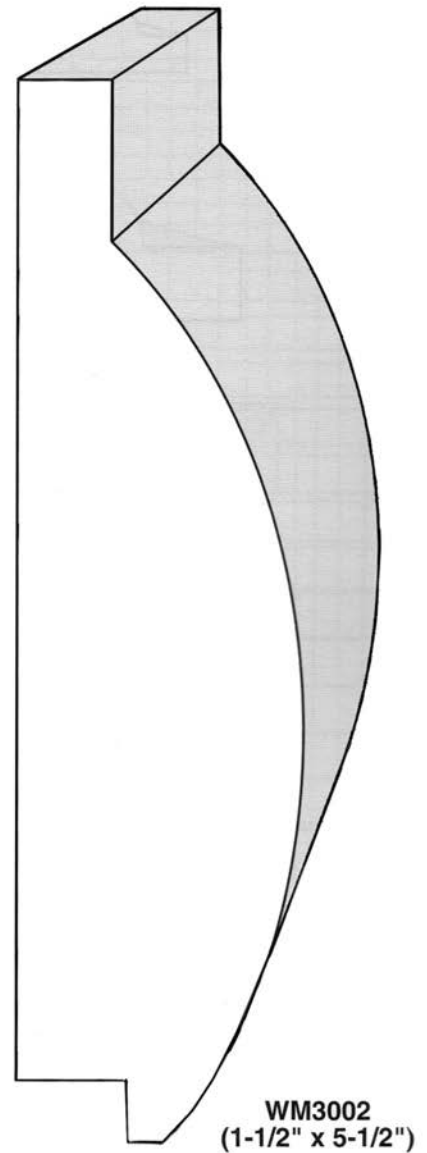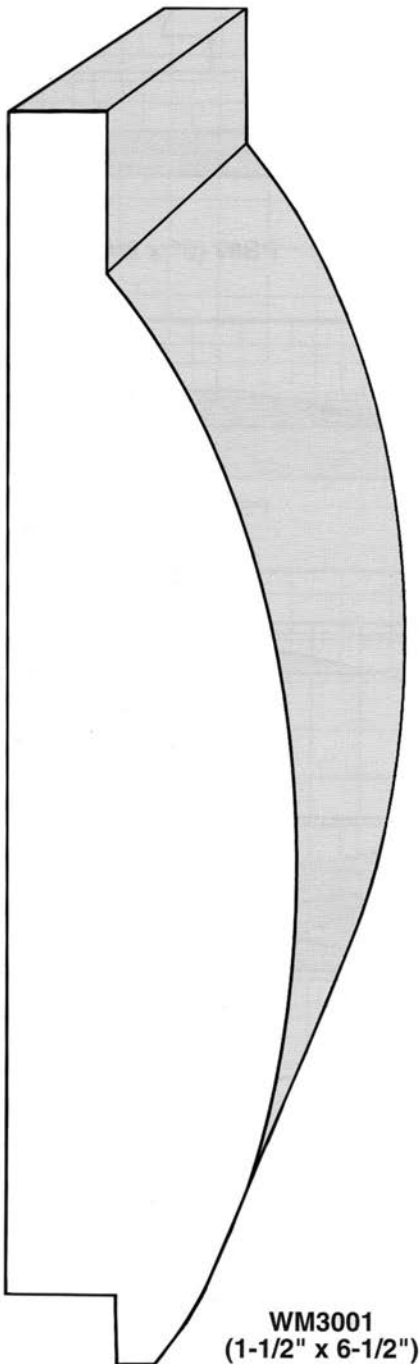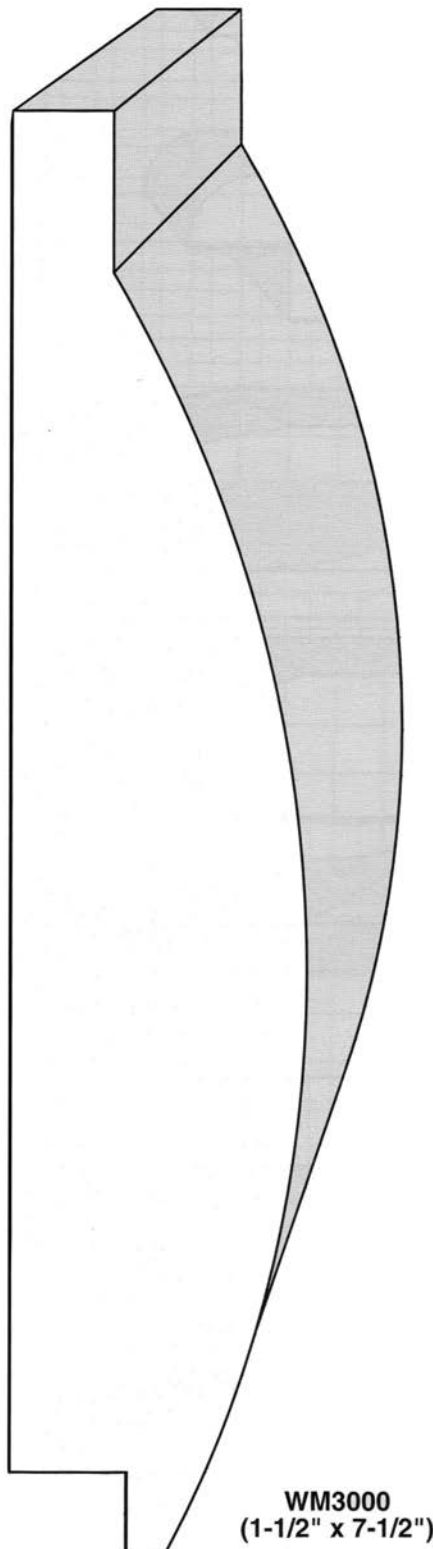

Core Creek Molding Patterns - LOG CABIN SIDING

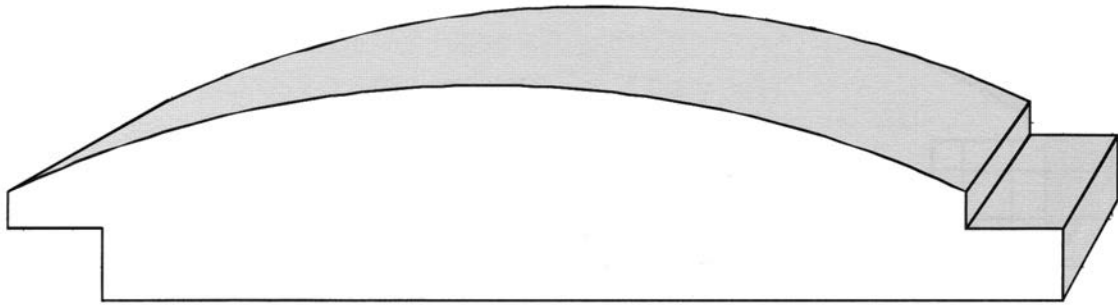


WM3010 WRAP-AROUND
1-1/8" X 5-1/2"

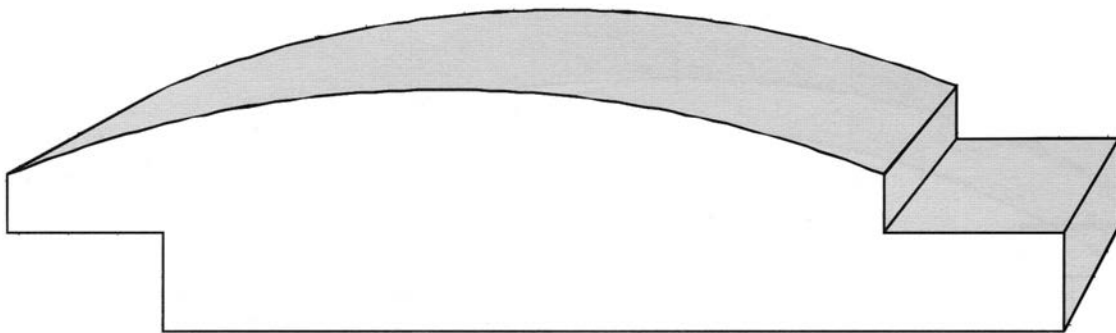


WM3011
1-1/4" X 5-1/2"

LOG CABIN SIDING - Core Creek Patterns


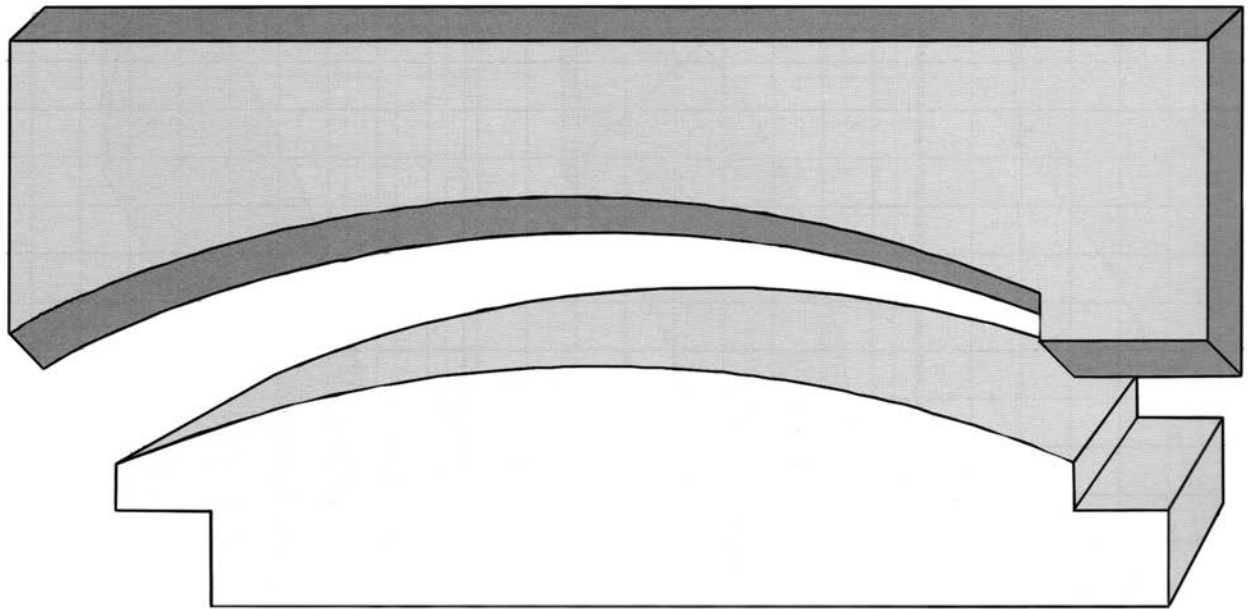


WM3012 OPEN-ENDED
1-1/4" X 5-1/2"

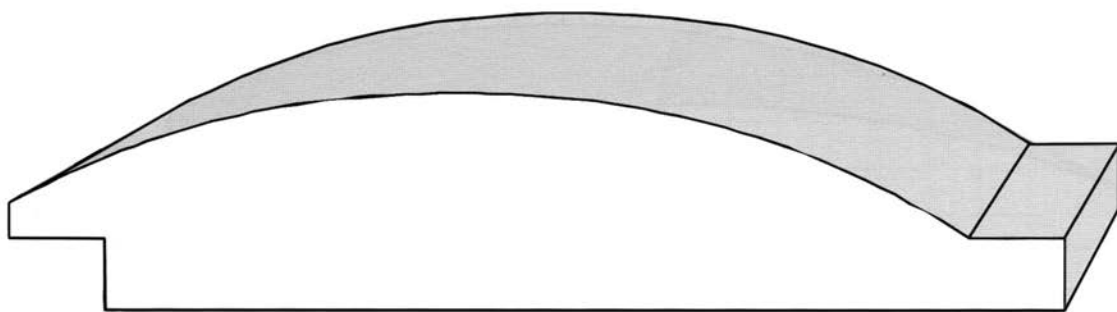










WM3013
1-1/8" X 5-1/2"

Core Creek Patterns - LOG CABIN SIDING

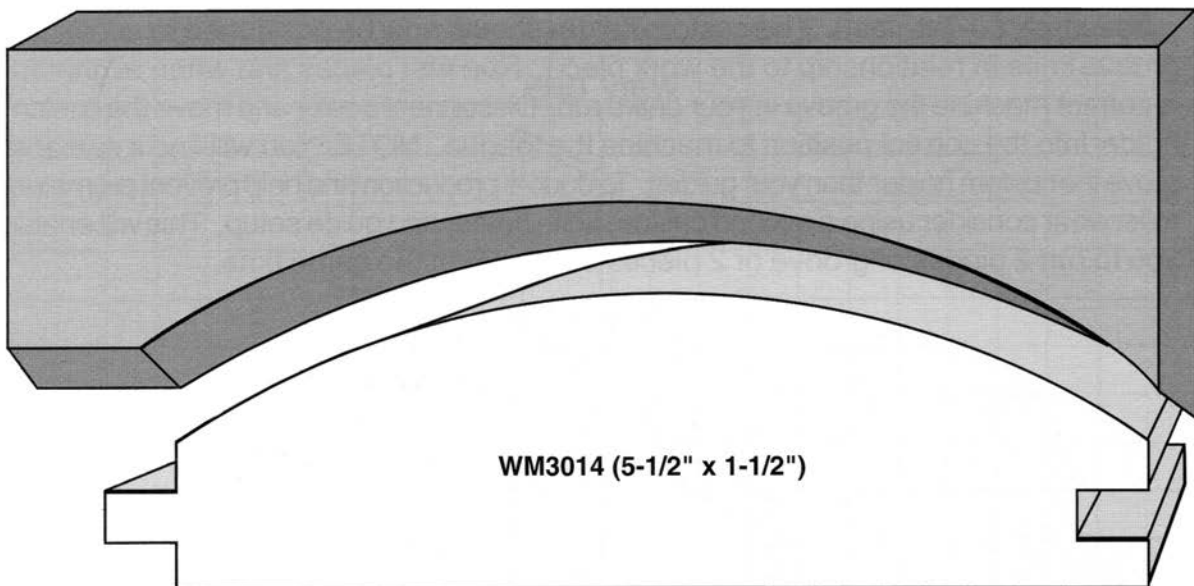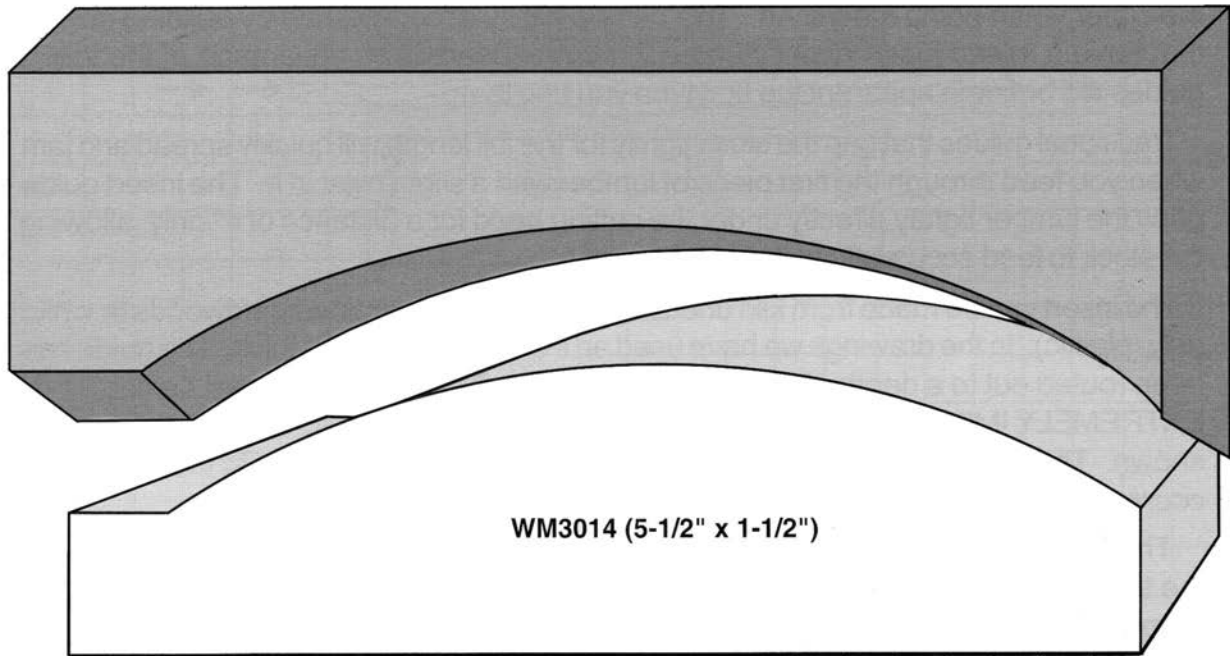


TONGUE & GROOVE - Core Creek Patterns


Boards have been edged with a tongue & groove pattern for centuries. It's a strong and simple way to join wood for flooring, paneling, tabletops, etc.

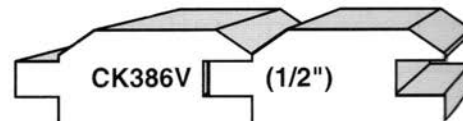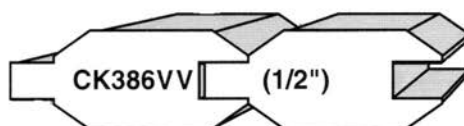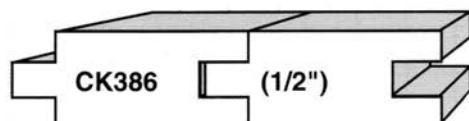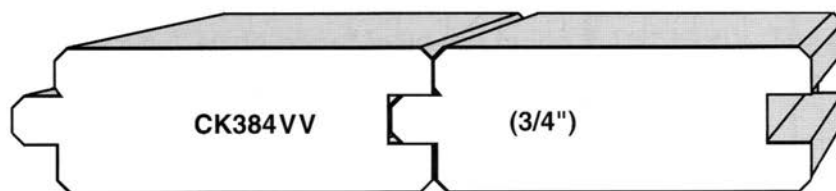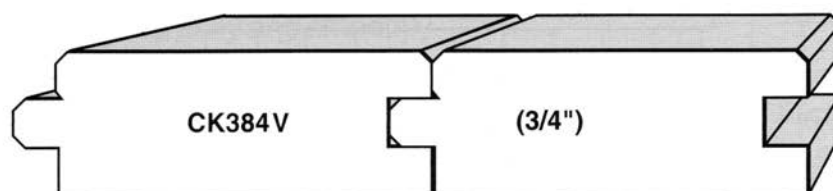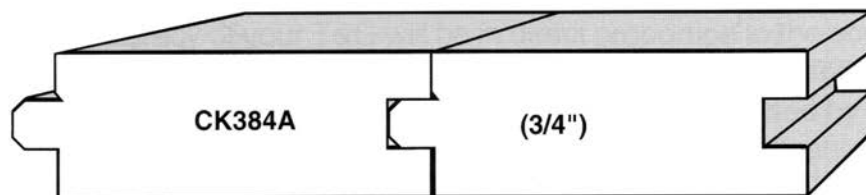


Core Creek Patterns - TONGUE & GROOVE

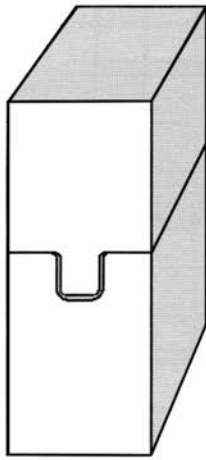


CK388
1"

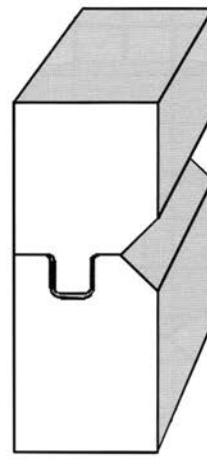

CK388V
1"

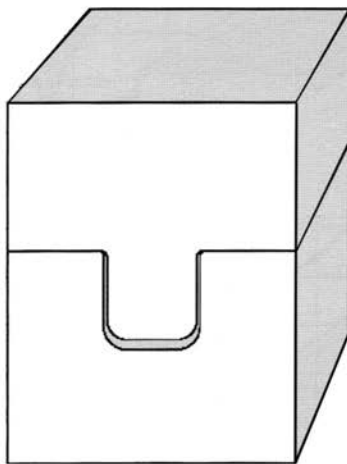


CK389
2"

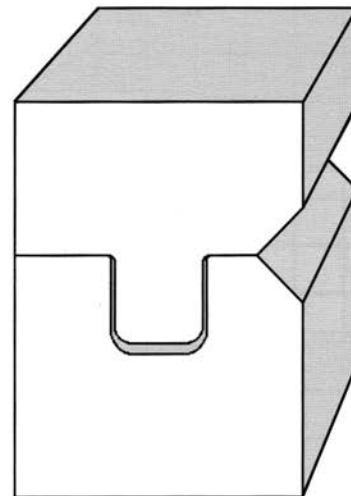


CK389V
2"

BAR RAIL - Core Creek Patterns

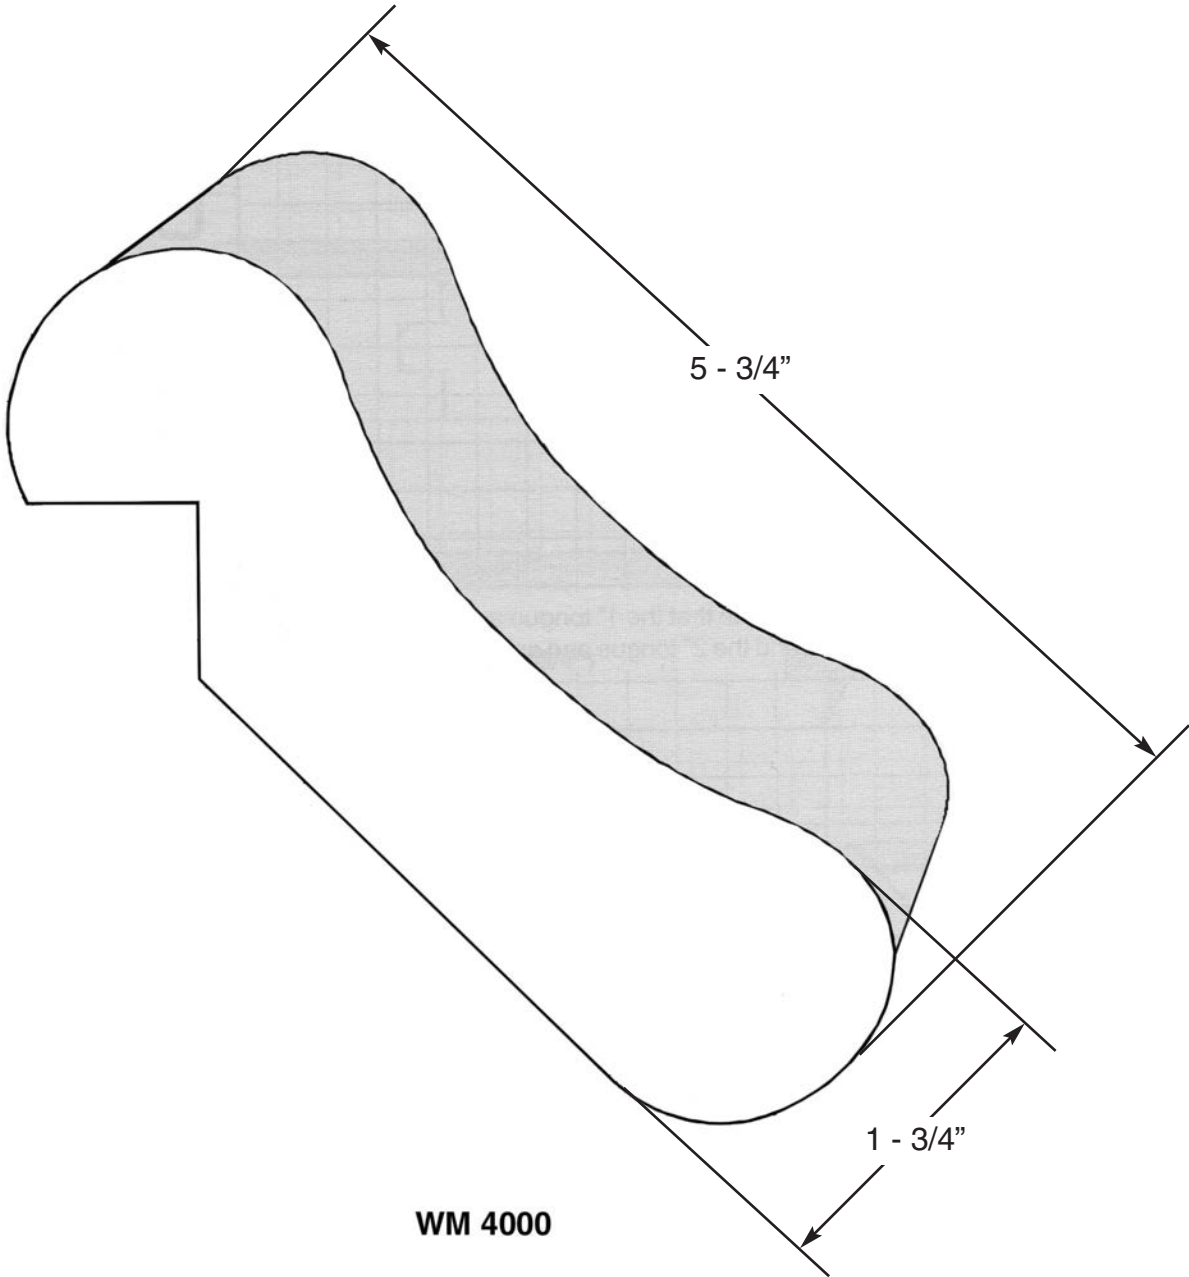

Core Creek Molding Patterns - PLANTATION LOUVER

Plantation Louver is the go-to pattern for any shutter or louver door, interior or exterior. Match existing louver patterns or design your own.



PL10
11/32" X 2"




PL14
11/32" X 2"




PL11
3/8" X 2-1/4"




PL15
3/8" X 2-1/4"

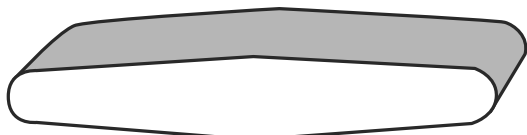


PL12
7/16" X 2-1/2"

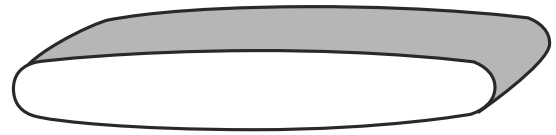

PL16
7/16" X 2-1/2"

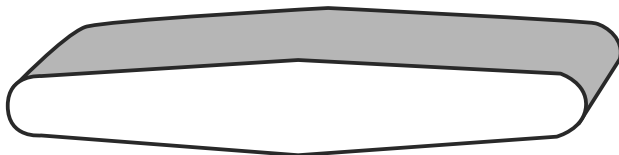

PL13
1/2" X 3"

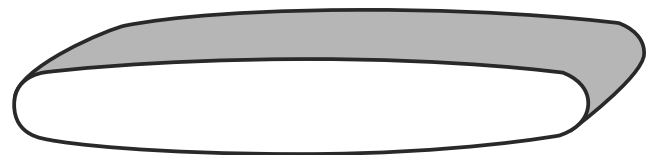

PL17
1/2" X 3"



PL18
11/32" X 2"



PL20
7/16" X 2-1/2"




PL19
3/8" X 2-1/4"




PL21
1/2" X 3"

Core Creek Molding Patterns - TRANSITION MOLDING

Transition molding is used to join surfaces that have different heights or levels. A “stepped” design makes a smooth height transition between varying hardwood or softwood surfaces, flooring and carpet, or flooring and tile. Dimensions given are outside widths.

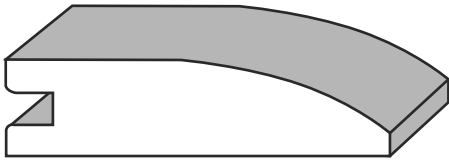


TR1
2"

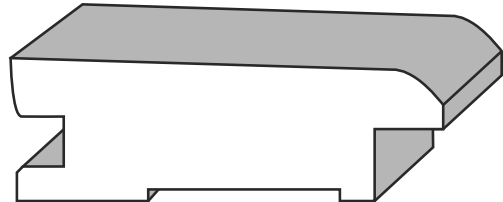


TR2
2-1/4"




TR3
3-1/4"

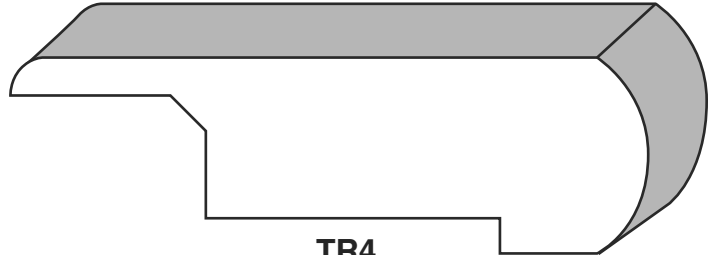


TR4
3-1/4"

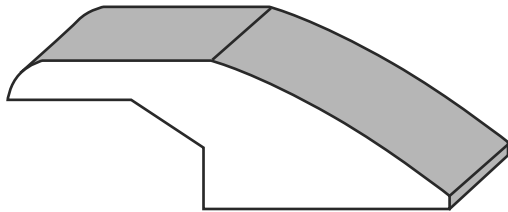

TR5
2-1/4"

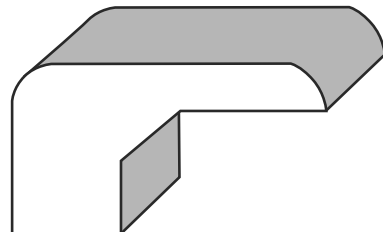





TR6
1-5/8"

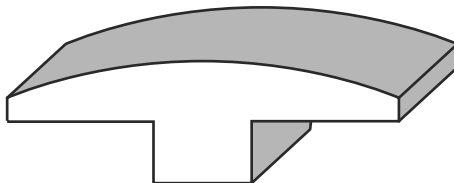


TR7
2"

“DESIGN-YOUR-OWN” KNIFE


Core Creek can have knives made that let you create virtually ANY molding pattern. Match new molding or antique patterns that haven't been manufactured in 100 years. Or you can design your own molding patterns — unique in all the world!

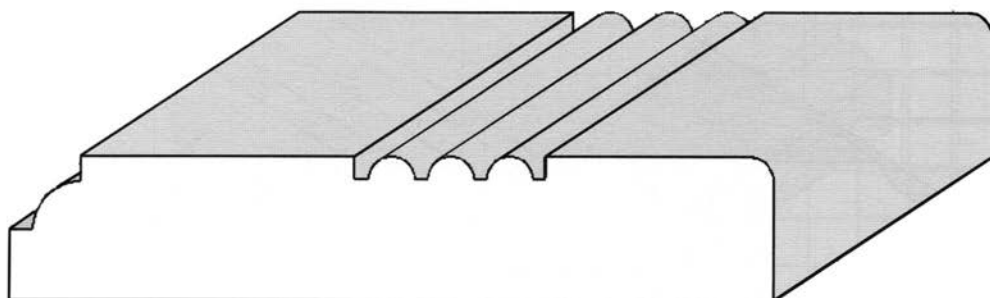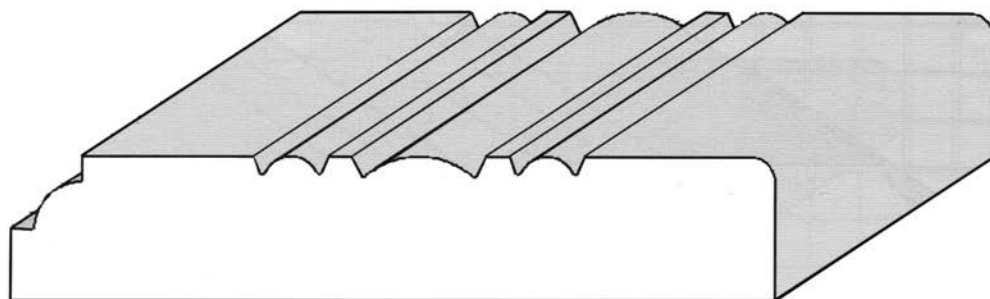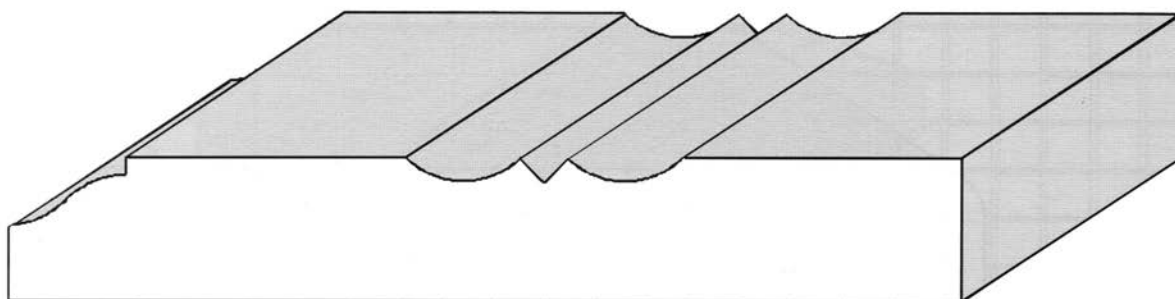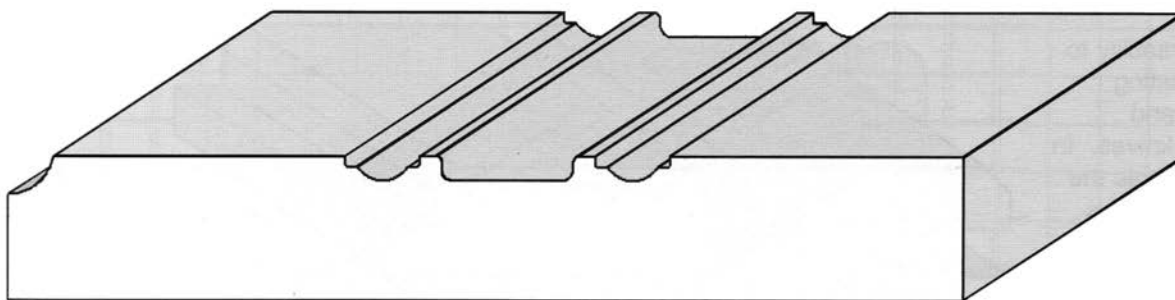


CRAFT KNIFE SERIES - Core Creek Patterns

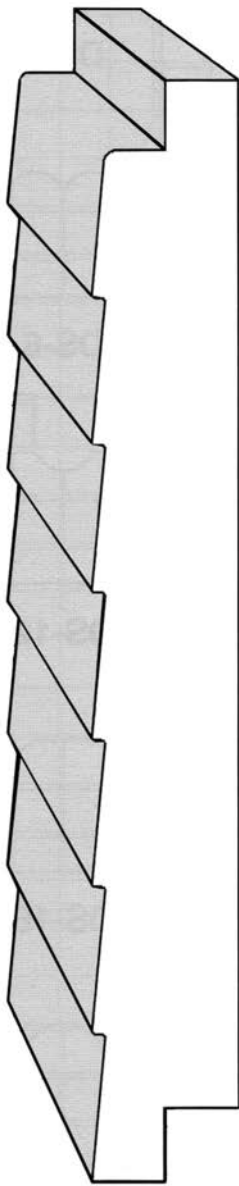

WM 5001
3/4" X 5-3/4"

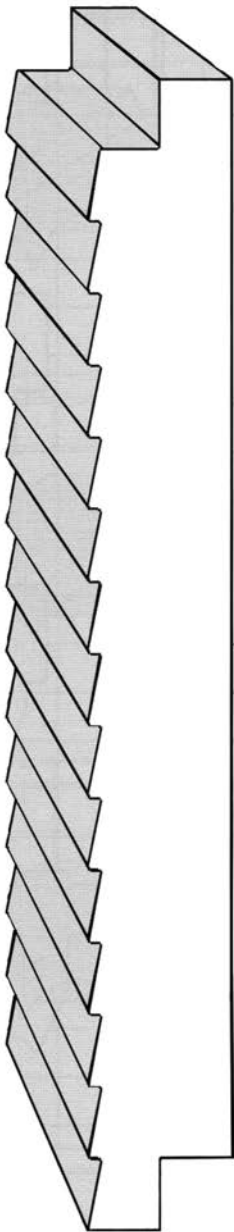

WM 5002
3/4" X 6'

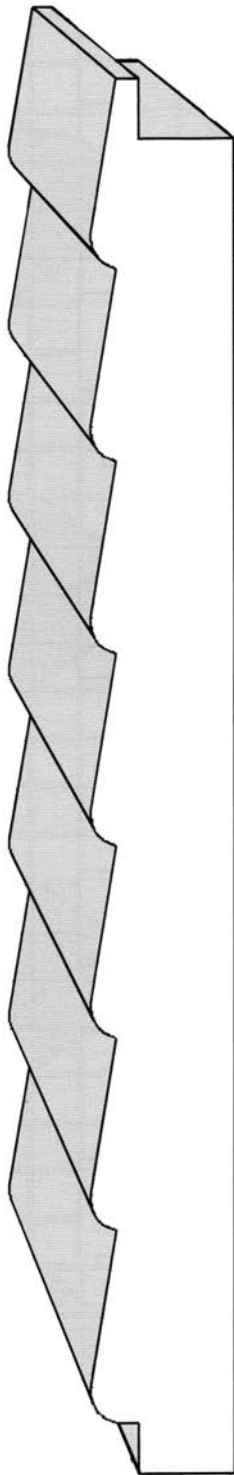

WM 5003
3/4" X 7-1/4"

